


# Geberit

## SIGMA 30 RECTANGULAR BUTTON FLUSH PLATE

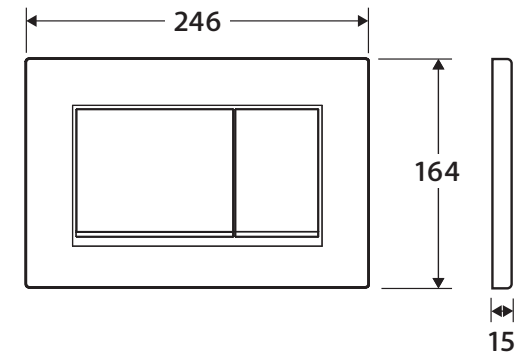

### Features

- For use with Geberit cisterns
- Dual flush
- Made from ABS



### Available in



Chrome with  
Matte Chrome Trim  
**SIG30-C**



Matte White  
with White Trim  
**SIG30-WH**



Matte Black  
with Black Trim  
**SIG30-BL**

### Cleaning & Care

- Regularly clean with mild soapy water using a microfibre cloth.
- In highly polluted or coastal locations, we recommend cleaning 2-3 times per week.
- Do not use harsh detergents, bleach, cream cleaners or citrus based cleaners. These substances are abrasive and will damage the surface.
- Do not use undue pressure and wipe in one direction only.

We aim to ensure that specifications are correct at the time of publication. All measurements are shown in millimetres. Always use measurements of actual product received for final specification as the technical drawing may contain differences. Due to printing limitations, physical colour may vary from the image shown. Fienza reserves the right to make modifications without prior notice.