INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS




 


1

man.



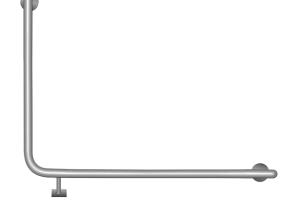



Supercedes all previous

4

SYDNEY | MELBOURNE | BRISBANE | PERTH | AUCKLAND Australia 1300 788 778 www.rba.com.au | New Zealand 0800 722 111 www.rbagroup.co.nz

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

YOU ARE RESPONSIBLE FOR THE SAFE OPERATION OF THIS UNIT

Attention

For optimum installation use at least 4 suitable screws for each wall-plate. Screws should be selected to suit the wall type.

Grab Rails are no stronger than the anchors or walls to which they are attached, and therefore, must be firmly secured in order to support the loads for which they are intended.

Maintenance and cleaning instructions

Do not use detergents containing bleach, acids, alkalis, or chlorine or abrasive products. Do not use abrasive objects (e.g. scouring pads). Do not use chemicals that can damage plastic. Clean the surface with water and a neutral detergent; rinse carefully and dry with a clean cloth. If alternative cleaning methods and/or chemicals are used, warranty may become void.

Important Warnings


Exceeding the maximum load values may cause permanent product damage. If this happens, cease use until checked by a specialised maintenance person. Improper use, such as for gymnastic exercises or as a step, may cause accidents with serious consequences. Reliable operation and product safety depend on the way the products are installed and used.

Ensure installation is performed by gualified personnel. Incorrect installation can seriously compromise product functionality.

Tools Required

Plumbers Tape Screw Driver Extended Driver Bit Spirit Level

Components Supplied

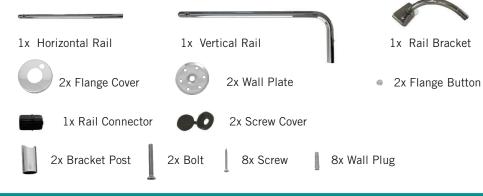

1. Lay rail flat with thread facing up.

2. Place bracket post onto

rail.

3. Slide flange cover over post.







4. Insert bolt through wall plate.

5. Insert wall plate and bolt assembly

6. Tighten.

 






7. Repeat for other fixing points.

8. Screw rail bracket into threaded insert



9. Connect rails.



3

SYDNEY | MELBOURNE | BRISBANE | PERTH | AUCKLAND Australia 1300 788 778 www.rba.com.au | New Zealand 0800 722 111 www.rbagroup.co.nz