

ELEGANCE II - SHOWER SET

WATER EFFICIENT TAPWARE

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Shower outlet is fitted with an 9 L/min flow regulator.
- * Not suitable for gravity feed systems.
- All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check in-wall depth (dimension 'A' in Fig. 1) to ensure correct length spindle (3) has been selected (see Table 1).
- 2) Check seats in recess tap bodies (1) are in good condition and free of foreign materials. Reseat if required.
- 3) Fully open tap spindle (3) in tap head assembly (2). Ensure fibre washer and jumper valve are in position as shown.
- 4) Screw tap head assembly (2) into recess tap body (1) by hand and tighten using suitable tube spanner.
- 5) Screw on wall flange (4) and tighten fully by hand against wall/tile face taking care not to damage the decorative finish.
- 6) Fit handle assembly as follows:-
- i) Turn both spindles to the fully closed position.
- ii) Place retaining nut (6) over spindle (3), with slot facing flange (4).
- iii) Place retaining clip (7) into groove at bottom of spline in spindle (3).
- iv) Ensure handle insert (8) is in position in handle (9). Fit handle (9) to spindle (3), position to suit. Push handle (9) firmly down until it bottoms internally.
- Screw retaining nut (6) into handle and tighten using spanner (5) provided.
- 7) Check that threaded nipple (11) is the correct length, as shown (Fig. 1). Cut to length if required ensuring end face is square. Apply thread tape to the thread.
 Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 8) Place the cover plate (10) over the threaded nipple (11). Screw the inlet socket (12) onto the threaded nipple (11) and position shower as required. DO NOT OVERTIGHTEN.

