

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * All pipework must be thoroughly flushed prior to installation.

Installation

- 1) Fit the cover plate (1) over threaded nipple (2) and check that the thread is the correct length, as shown. Cut to length if required, ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Screw spout (3) onto threaded nipple (2) & engage with the hole in the cover plate (1), continuing until the shoulder contacts the cover plate and the outlet is pointing downwards.

Removing Aerator Insert (Fig.4)

- 1) Aerator insert (4) can be removed with the key (5) provided.
- 2) Deposits of lime can be removed by washing in a vinegar solution.
- 3) When replacing aerator insert (4), be careful that thread is engaged correctly and 'O'ring is not damaged as it enters the bore. Tighten securely (to prevent removal by hand) using key (5).

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

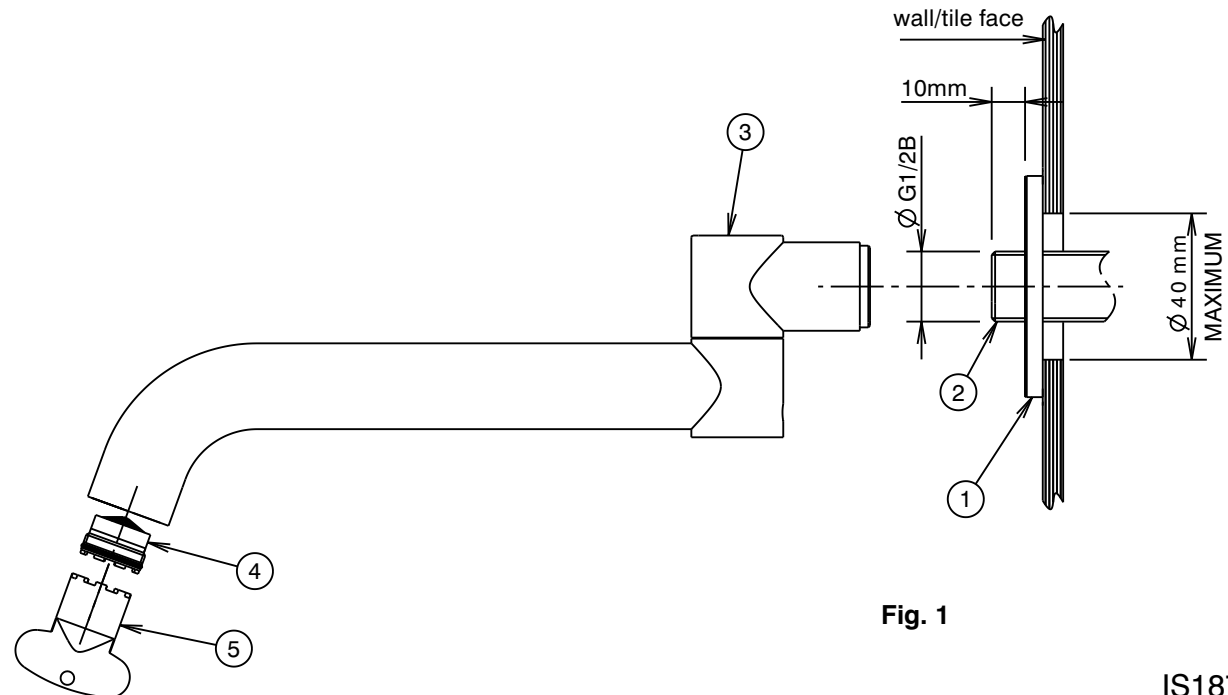
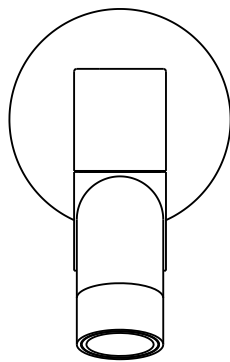


Fig. 1