

# SATINJET® WALL SHOWER/ARM

## Installation Guide

---

### Technical Specifications:

**Operating Temperature:**

Hot: Max 60°C / 140°F\*

Cold: Min 5°C / 40°F

**Inlet Connections:**

All ½" BSP

\* Regional specific regulations apply.

Please refer to your warranty statement at

[www.methven.com](http://www.methven.com)

Suitable for use with high pressure water supply

---

### SHOWER ARMS

**Operating Pressure:**


Min: 35kPa/0.35bar

Max: 500kPa/5bar\*

**AUSTRALIA ONLY**

Min: 150kPa/0.5bar

Max: 500kPa/5bar\*

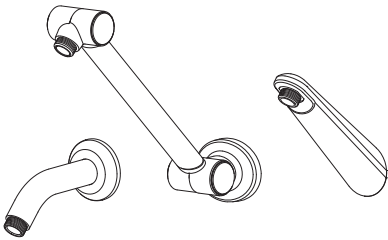

### WALL SHOWERS

**Operating Pressure:**


Min: 35kPa/0.35bar

Max: 500kPa/5bar\*

**AUSTRALIA ONLY**

Min: 150kPa/0.5bar

Max: 500kPa/5bar\*

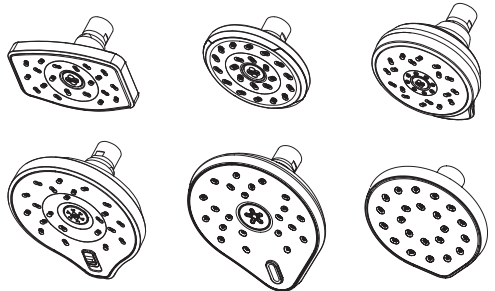**Operating Pressure:**

Min: 150kPa/1.5bar

Max: 500kPa/5bar\*



# METHVEN

[www.methven.com](http://www.methven.com)


## IMPORTANT:

Please read all of the instructions before installation.

### GENERAL:

- This product must be installed in compliance with all relevant regional regulations.
- It is the responsibility of the installer to ensure a watertight seal is achieved.
- Care should be taken when connecting wall shower to shower arm to not damage the flow restrictor in the wall shower.
- All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

Some low flow showers may not be suitable for use with gravity-fed water heaters, low pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.

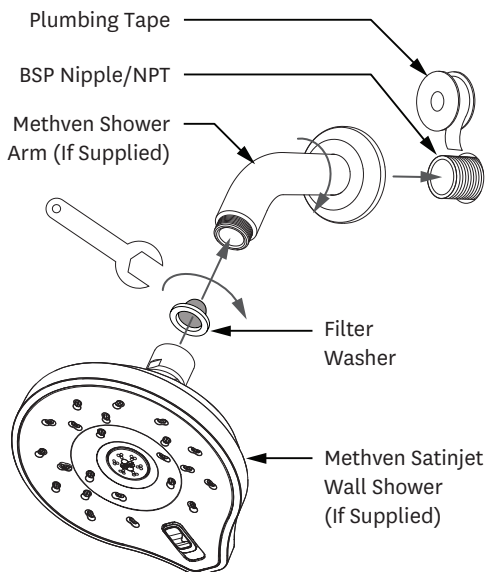

### CARE AND CLEANING:

- Never use abrasives or abrasive cleaning agents to clean this product. To clean the chrome-plated surface use contamination free warm soapy water and a damp soft cloth.
- Lime deposits can be prevented from forming on the faceplate by wiping immediately after use. If shower performance is compromised by the build-up of lime-scale, soak in limescale remover for up to 10 minutes. Do not attempt to remove limescale with sharp objects or abrasives. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the shower. Always rinse the shower thoroughly after cleaning to remove cleaning products that can damage the shower.
- Clean face plate using a brush with soft bristles.
- Do not use any sharp objects to clean nozzles.
- Clean filter washer located in the ball joint periodically.

---

Methven warrants this product against manufacturing defects and that it is suitable for use under the general operating conditions specified in this instruction sheet. However, regional regulations apply and may affect your warranty. Please refer to [www.methven.com](http://www.methven.com) or call customer service for full details.

New Zealand  
0800 804 222

Australia  
13 14 16

UK  
0800 195 1602