
GLOSS

GLOSS SOAP DISH

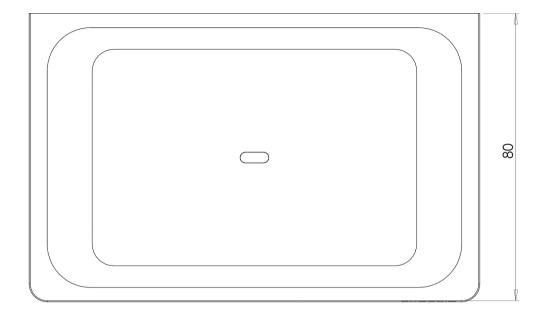







AVAILABLE IN











GS895 Chrome

GS895-40 Brushed Nickel

GS895 MB Matte Black Brushed

GS895-12 Gold

INFORMATION



MAINTENANCE AND CARE:

- All surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface.
- Any damage caused in this way will not be covered by warranty.

Please visit https://www.phoenixtapware.com.au/warranty to view the full warranty

