


PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Not suitable for gravity feed systems.
- * Laundry arm outlet is fitted with a 7 L/min flow regulator.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the inlet socket (3) onto the threaded nipple (2) and position laundry arm as required.
DO NOT OVERTIGHTEN.

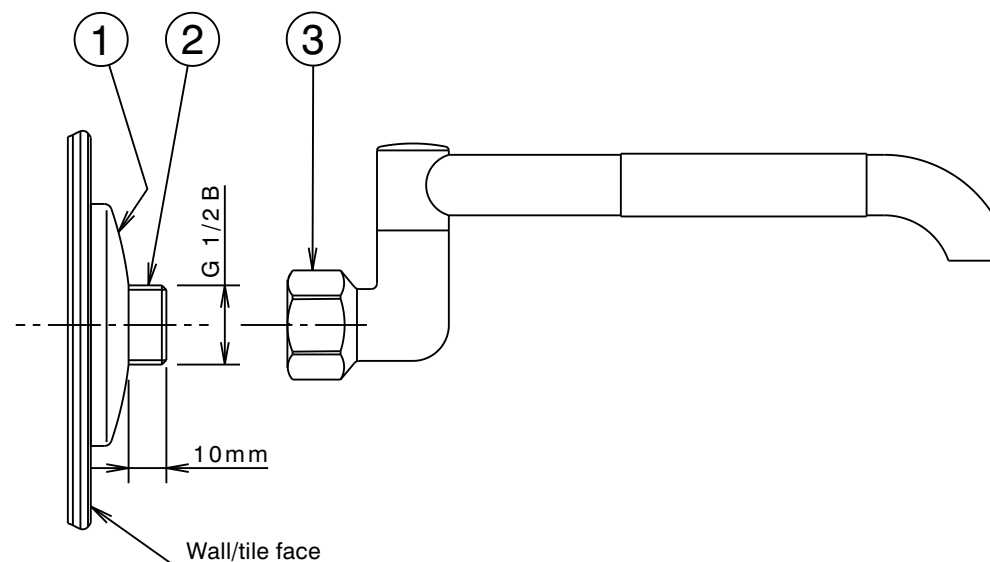

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Inlet pressure range : 150 – 1000 kPa
New Regulation : –500 kPa maximum operating pressure at any outlet within a building.
(Ref. AS/NZS 3500.1–2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.