

**FIXING DOWN BASIN + SEALING EDGE**




01 Run a line of clear wet area silicone around the underside of the basin 10mm back from the edge



02 Run another line of clear wet area silicone 20mm back from the waste hole



03 Press down into benchtop and remove excess silicone using wax and grease remover and soft cloth

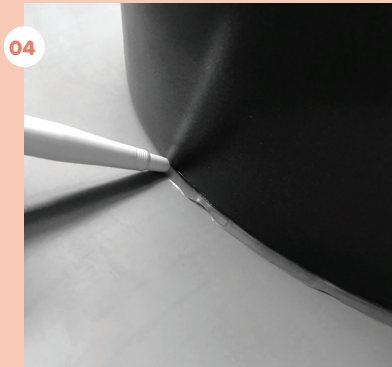

04 Run a bead of clear wet area silicone to fill the gap between the basin and benchtop



05 Smooth silicone off to a neat finish and wipe clean with wax and grease remover



06 Please ensure the edge is waterproof and 100%, so that water can never get under the basin

**FIXING IN THE WASTE**



01 Run a bead of clear wet area silicone around the waste rim



02 Be generous with application. It is critical that silicone overflows when waste is placed down



03 Slide waste into place



04 Hand-tighten waste. Do not over tighten.



05 Carefully push silicone around gap between waste and sink



06 Clean excess with wax and grease remover and let dry for 24 hours

# additional info

FOR MORE INFORMATION ON BASIN WARRANTY,  
MAINTENANCE AND INSTALLATION, PLEASE VISIT:



## WARRANTY

[noodco.com.au/sink-warranty](https://noodco.com.au/sink-warranty)

---



## MAINTENANCE

[noodco.com.au/sinks-info/#maintenance](https://noodco.com.au/sinks-info/#maintenance)

---



## INSTALLATION

[noodco.com.au/sinks-info/#install](https://noodco.com.au/sinks-info/#install)

---