


## New Mecca Bathroom Accessories


### ROBE HOOK

NR2382CH / NR2382MB / NR2382BN  
NR2382GM / NR2382BG

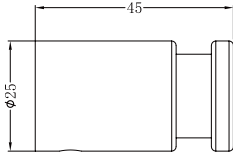


### SINGLE TOWEL RAIL 600MM

NR2324CH / NR2324MB / NR2324BN  
NR2324GM / NR2324BG

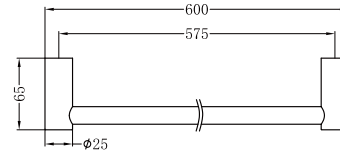


### SINGLE TOWEL RAIL 800MM

NR2330CH / NR2330MB / NR2330BN  
NR2330GM / NR2330BG

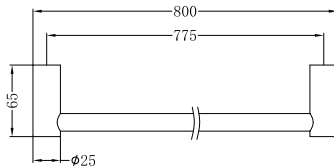


### DOUBLE TOWEL RAIL 600MM

NR2324dCH / NR2324dMB / NR2324dBN  
NR2324dGM / NR2324dBG

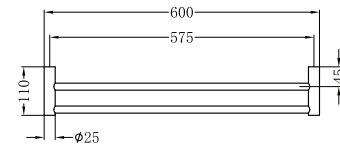


### DOUBLE TOWEL RAIL 800MM

NR2330dCH / NR2330dMB / NR2330dBN  
NR2330dGM / NR2330dBG




### METAL SHELF

NR2387aCH / NR2387aMB / NR2387aBN  
NR2387aGM / NR2387aBG

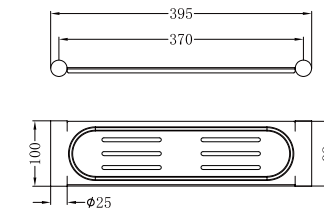


### SOAP DISH HOLDER

NR2381CH / NR2381MB / NR2381BN  
NR2381GM / NR2381BG

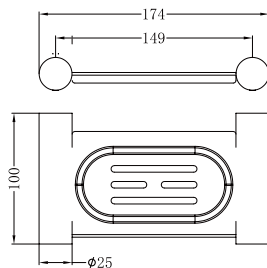


### TOILET ROLL HOLDER

NR2386CH / NR2386MB / NR2386BN  
NR2386GM / NR2386BG

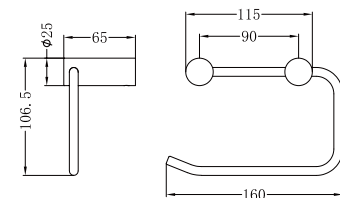


### HAND TOWEL RAIL

NR2380CH / NR2380MB / NR2380BN  
NR2380GM / NR2380BG

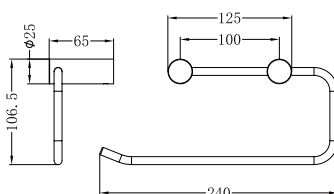

### TOWEL RING

NR2380aCH / NR2380aMB / NR2380aBN  
NR2380aGM / NR2380aBG

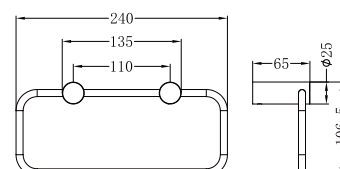

# Available Colour

---



CHROME



MATTE BLACK



BRUSHED NICKEL



GUN METAL




BRUSHED GOLD

# Installation Instruction


---

1

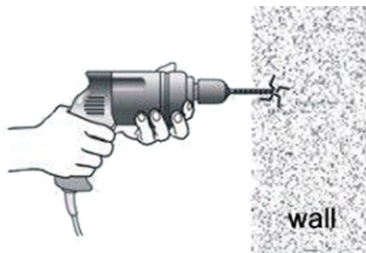


1. Put the fixing blocks (piece) over on the right place on the wall , and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.

02

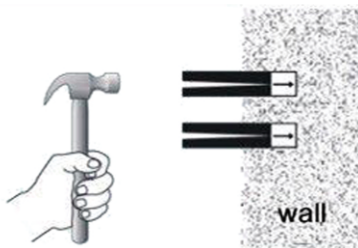


2. Put the expansion plugs into the wall by hammer.

3

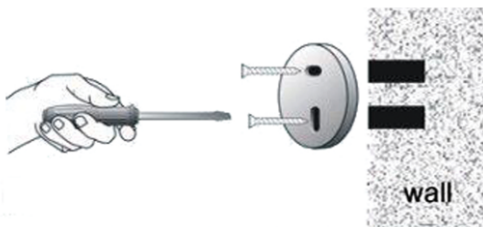


3. Put fixing block cover on the holes and fix firmly by expansion screws.

04

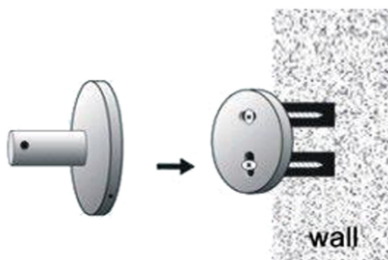

4. Put the base of bathroom accessory cover on the fixing blocks.

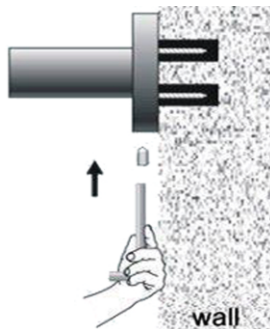

5. Screw grub screws into the base, make it against to the fixing block tight and firm.