

Opal Progressive Wall Basin/Bath Set Trim Kits Only

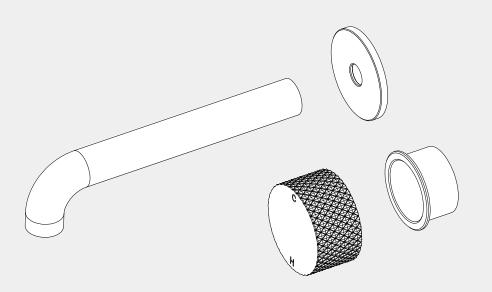


Versions:202311

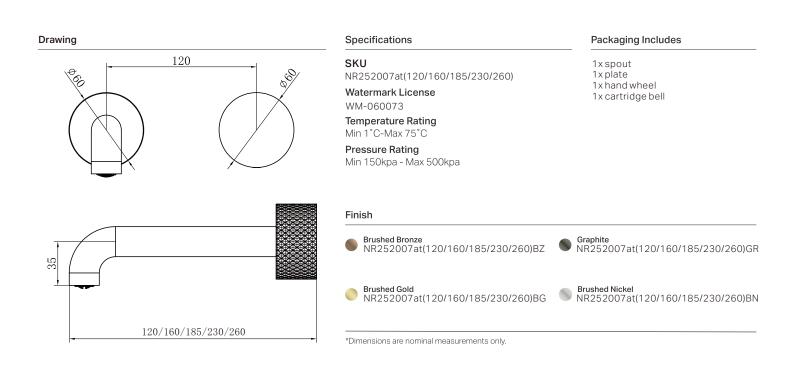


Nero


Installation Instruction For Trim Kits Only

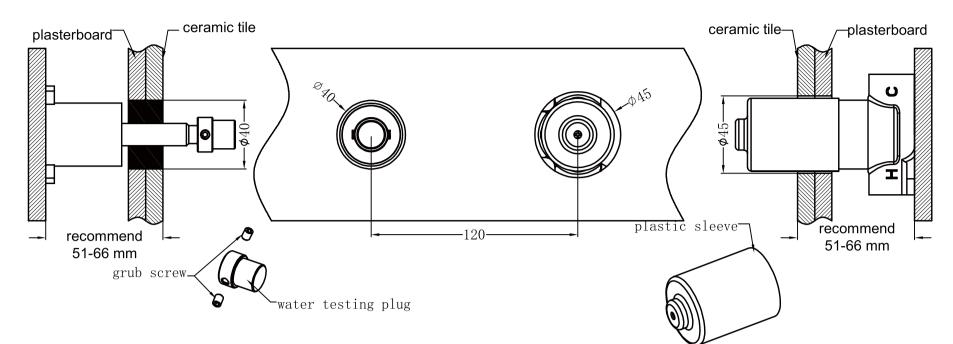

1. Remove plastic sleeve, grub screw and water testing plug.

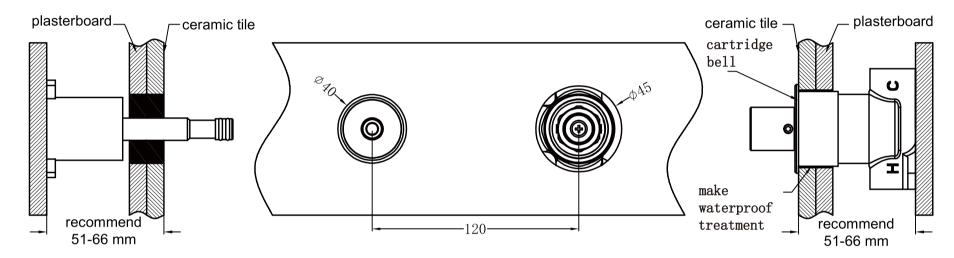


2.Put cartridge bell onto body and do waterproof treatment for the gap between cartridge bell and plasterboard and ceramic tile.

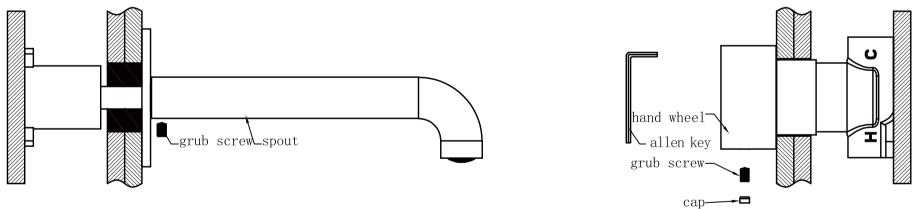

firmly by allen key.

4. Make hand wheel into connecting rod, turn the hand wheel counterclockwise to the end. Then reinstall the hand wheel, make the "C" should be on twelve o'clock direction and "H" on the six o'clock direction, according to above picture. Then tighten grub screw of hand wheel by allen key, put cap into hand wheel.

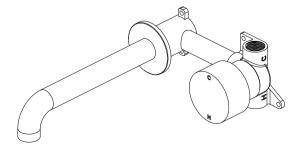

www.nerotapware.com.au

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

