


Kara Progressive Shower System With Spout Trim Kits Only

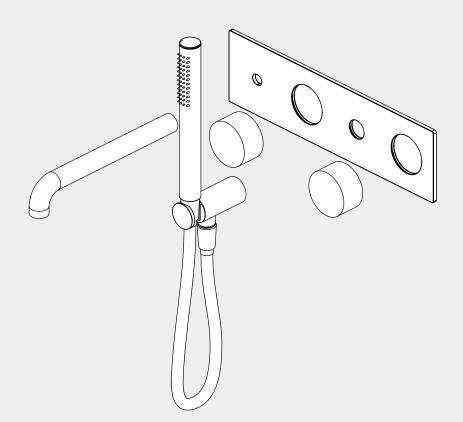


l\lero

Versions:202401

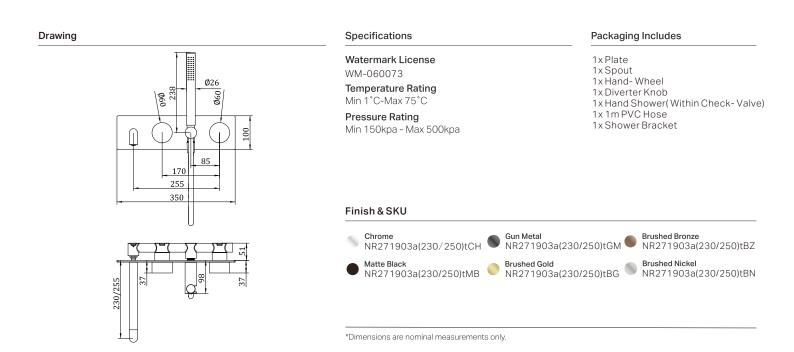

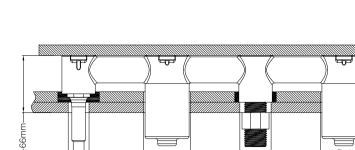




(1)

-plasterboard


File surface

- 1. Install tiles and drill holes with diameters of Ø20, Ø45, Ø30, Ø45.
- 2. Remove the pressure test plug.

3. Assemble the cutting gauge onto the mixer body, make it flush with the tile surface, and trim off any excess part after assembly.

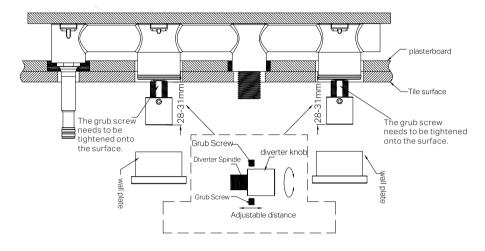


5. Adjust the distance between the Diverter knob and the tile surface to 28-31 mm. as shown in the diagram. 6.Place the wall plate onto the mixer body.

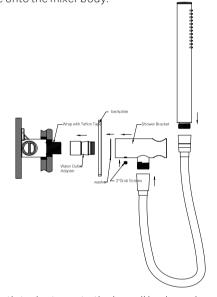


8. Thread the water outlet adapter onto the in-wall body, and seal with Teflon tape. 9. Assemble the Backplate, washer, and shower bracket onto the main body, then secure with screws.


10. Attach the shower hose and hand shower, securing them in place.

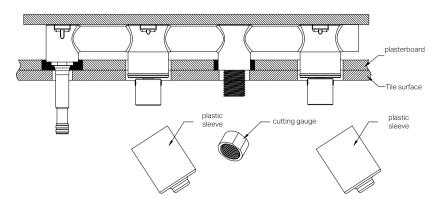

4. Remove the cutting gauge and protective sleeves.

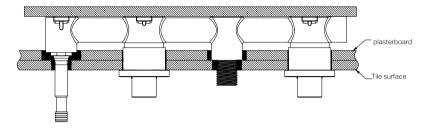


7. Apply waterproofing in the gap between the ceramic tile and the water outlet.

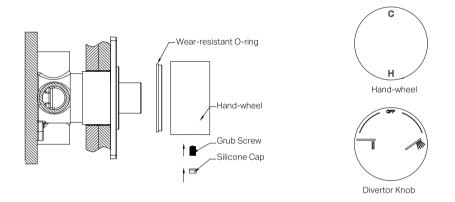

Follow step 11 to install the Hand-wheel and the Diverter Knob

11. Attach the wear-resistant O-ring, hand-wheel/ Diverter knob, grub screw, and silicone cap, securing them in place.

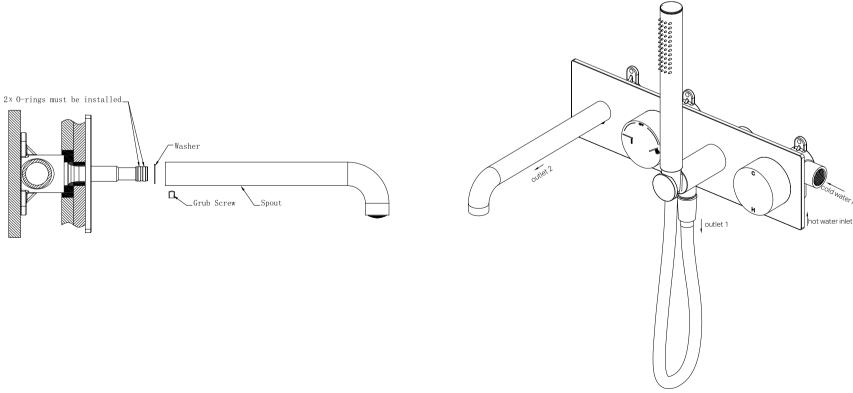



12. Assemble washer, and spout onto the mixer body, then secure with grub screws. Please Note: Waterproofing is required.

13. Installation is now complete. Test for leaks.

www.nerotapware.com.au

Kara Progressive Shower System With Spout Trim Kits Only-Manual

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

