

LION Paw Feet

For Freestanding Acrylic Bath

BEFORE INSTALLATION:

CHECK PRODUCT THOROUGHLY. INSTALLATION OF FAULTY OR DAMAGED GOODS WILL VOID WARRANTY.



Chrome Feet
FR2550-FEETC



Semi-Gloss White Feet
FR2550-FEETW



Matte Black Feet
FR2550-FEETB

PACKING LIST:

After opening box, check all packed parts carefully and report any missing parts, finishing defects or damage immediately to your retailer. Do not proceed with installation if there are issues as this will void the warranty.



Acrylic Bath Tub



Lion Paw Feet - 2 Sets



REQUIRED TOOLS:

Additional tools required for installation (not included in package).




Shifter




Spirit Level

1. Clean the bubble film.
2. Attach lion paw feet to the bottom of the bathtub, making sure they face in the right directions.
3. Attach with nuts and bolts as pictured, but do not tighten at this stage.

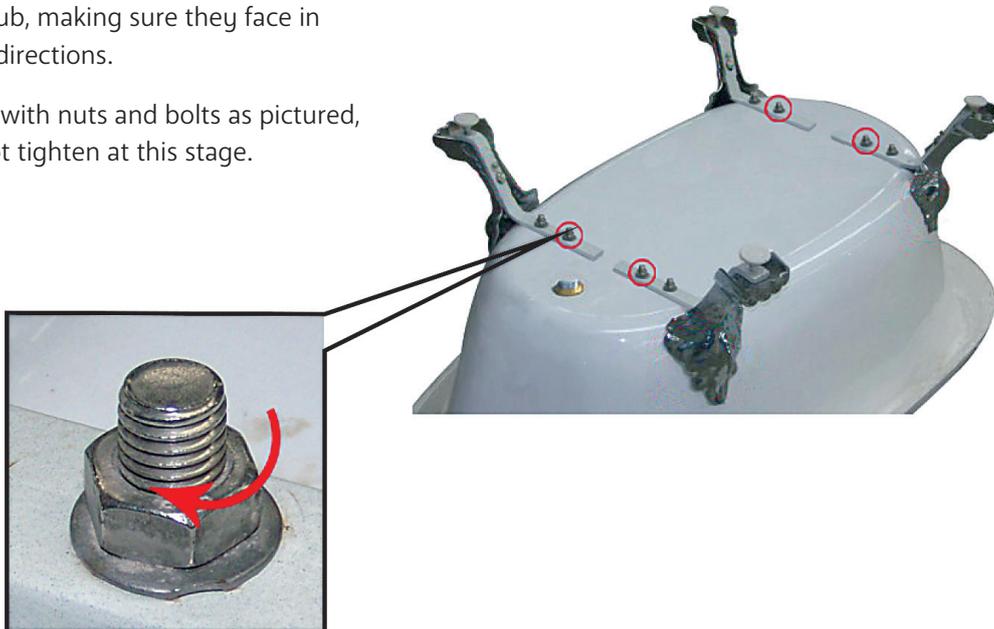

4. Adjust gaskets until feet sit securely against the bathtub.
5. Now tighten nut to fix the feet in place.

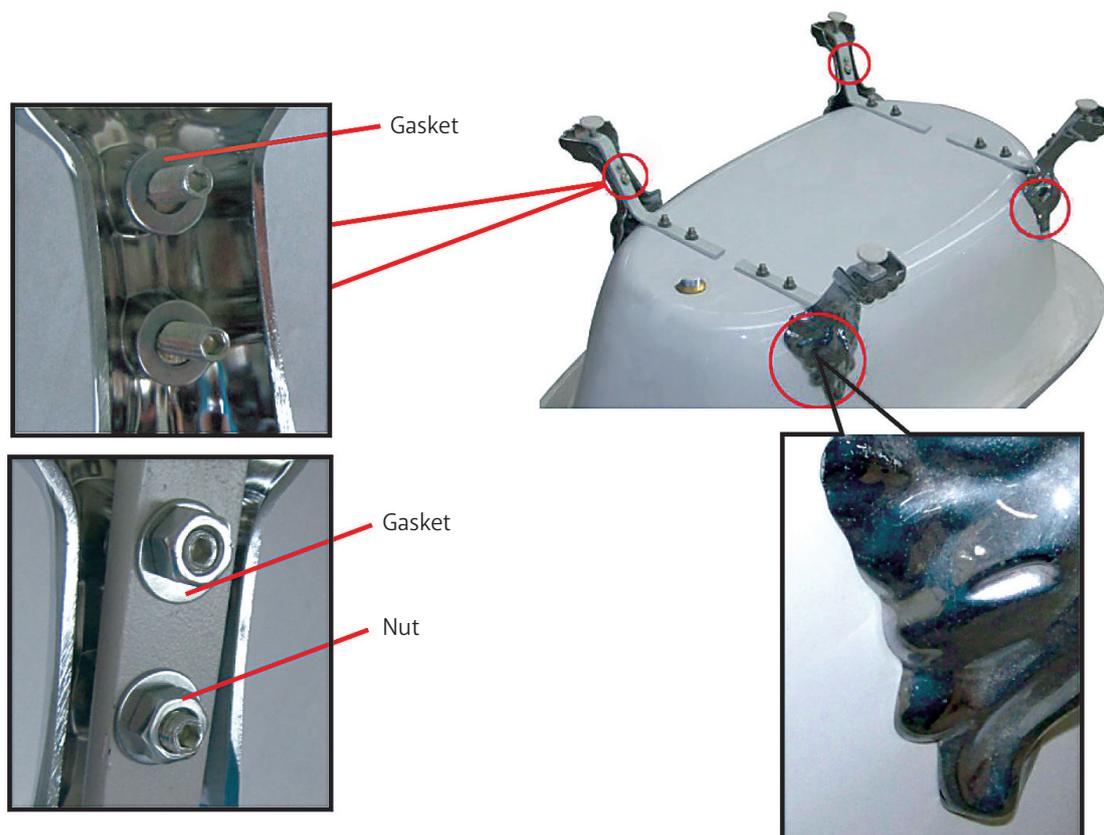

6. Use a spirit level to make sure the bathtub is flat.
7. Adjust the four plastic feet until they are level.
8. Make sure the round plastic foot sits higher than the decorative lion paw foot. This will take the weight of the bathtub, not the decorative foot.



9. Clean the lion paw feet and the bathtub.
10. Turn the tub over to its upright position (2-man lift required).
11. Adjust the round plastic feet until they meet the floor and the bathtub is stable.

