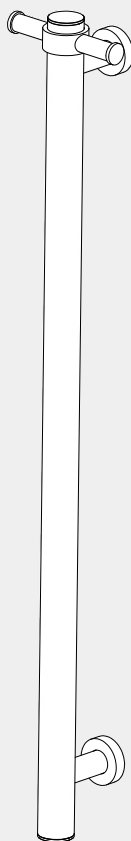


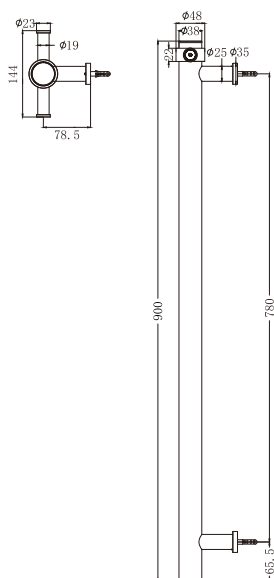
Non-Heated Vertical Towel Rail 900mm

Nero



Versions:202401

Drawing



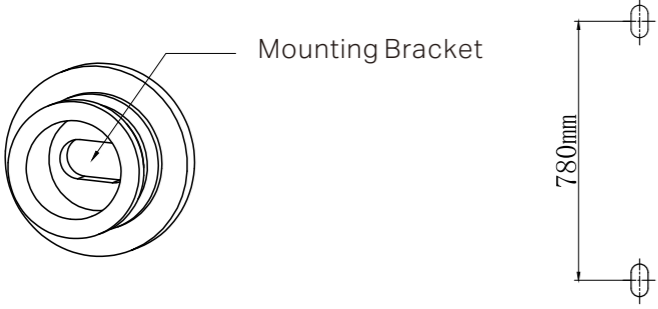
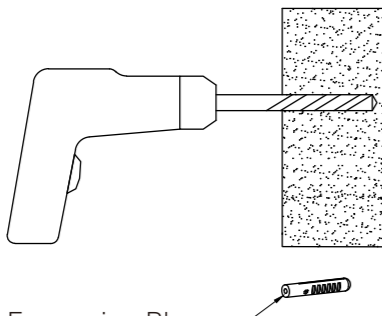

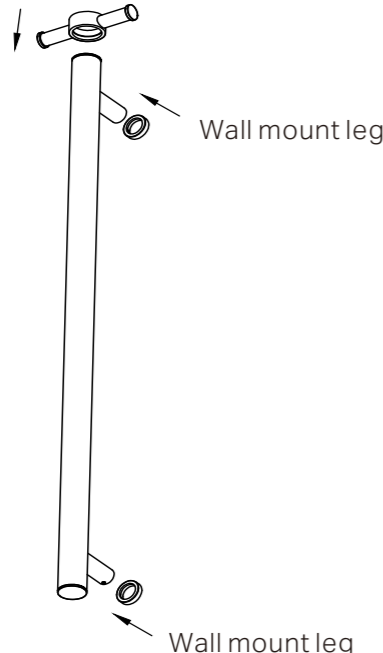
Packaging Includes

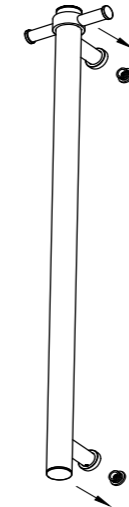
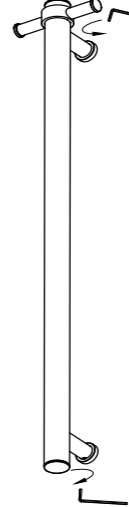
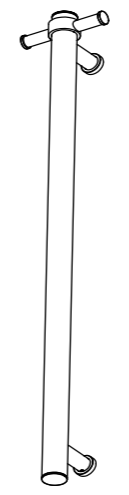
- 1x Towel Rail
- 1x Double Robe Hook
- 2x Plates
- 1x Fixing Kit

Finish & SKU

 Chrome NRV901CH	 Gun Metal NRV901GM	 Brushed Bronze NRV901BZ	 Graphite NRV901GR
 Matte Black NRV901MB	 Brushed Gold NRV901BG	 Matte White NRV901MW	 Brushed Nickel NRV901BN

*Dimensions are nominal measurements only.

 <p>Mounting Bracket</p> <p>780mm</p>	<p>1. Use the mounting bracket to mark out the mounting points. Ensure center-to-center distance is 780mm. Please note: Choose an accessible location with enough clearance. Ensure it's free from electrical wiring or plumbing. Ensure mounting points are level.</p>
 <p>Expansion Plug</p>	<p>2. At the marked points, drill holes approximately 60mm deep to accommodate the installation of screws (or use suitable expansion plug for your wall type).</p>
 <p>Fastening Screw</p>	<p>3. Use the supplied fastening screw to fasten the mounting brackets to the wall.</p>
 <p>Wall mount leg</p> <p>Wall mount leg</p>	<p>4. Slide backplates to the wall mount legs. Slide the double robe hook on the top of the towel rail.</p>

	<p>5. Fit the towel rail to the mounting brackets.</p>
	<p>6. Use the supplied Allen Key to secure the grub screws into the wall brackets.</p>
	<p>7. Installation is complete.</p>

Maintenance and Care:

Regular Inspection: Periodically check the towel rail for any loose fittings and tighten them as needed.

Cleaning: Clean the towel rail regularly with a soft, damp cloth. Avoid using abrasive cleaners or materials that could scratch or damage the finish.

Nero

info@nerotapware.com.au
nerotapware.com.au

11-13 Buontempo Road
Carrum Downs Vic 3201

