

INSTALLATION INSTRUCTIONS

Important Information

- * To prevent drill from wandering on tiled surface it is recommended that masking tape be applied before drilling.
- * Do not use wall hook for personal support.
- * Over time, the mounting screws which are used to install the product may be affected by exposure to water/moisture, this may cause the screws to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.

Installation

A) DETERMINE POSITION:

Position mounting block (2) in desired location against wall or fixing surface while ensuring the flat surface over the mounting block (2) is horizontal as shown in Fig. 2, then use a pencil to mark screw holes position on the wall.

B) DETERMINE WALL TYPE:

Solid Walls: - (Brick, masonry blocks, concrete etc)

- 1) Drill two holes 6mm diameter, 40mm deep for wall plugs (1).
- 2) Insert rounded end of the wall plugs (1) into the drilled holes and tap until flush with the wall surface.
- 3) Align screw holes in mounting bracket (2) with wall plugs holes, pass the screws (3) through holes in mounting bracket (2) before inserting into the wall plugs (1) and tighten screws (3).

Untiled Cavity Walls:-(Plasterboard)

- 1) Determine a suitable position to attach the mounting block (2) so that it can be fixed to a stud or noggin in the wall.
- 2) Ensure correct orientation of the mounting block (2) is as shown in Fig. 2. Drill Ø3.2mm holes at the marked positions, then place mounting brackets (2) while aligning the fixing slots/holes on mounting bracket (2) with the holes on the wall. Then fix using screws (3) through the mounting bracket (2) and timber stud or noggin.

Untiled Plasterboard cavity walls (hollow):-

Suitable hollow wall anchors (not supplied) must be used. Drilled hole size is dependant on the type and size of wall anchor used. Follow install instructions supplied with the cavity anchor.

C) WALL HOOK INSTALLATION:

Loosen the fixing screw (5) on the wall hook using Allen key (6) provided. Slide wall hook (4) over mounting block (2), making sure that the grub screw (5) is positioned underneath as shown. With wall hook resting securely against wall surface, tighten the fixing screw (5) using Allen key provided (6).

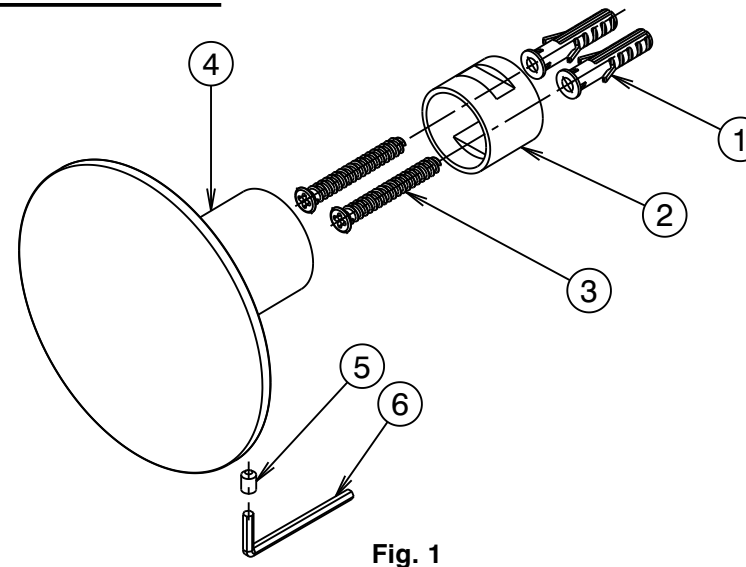


Fig. 1

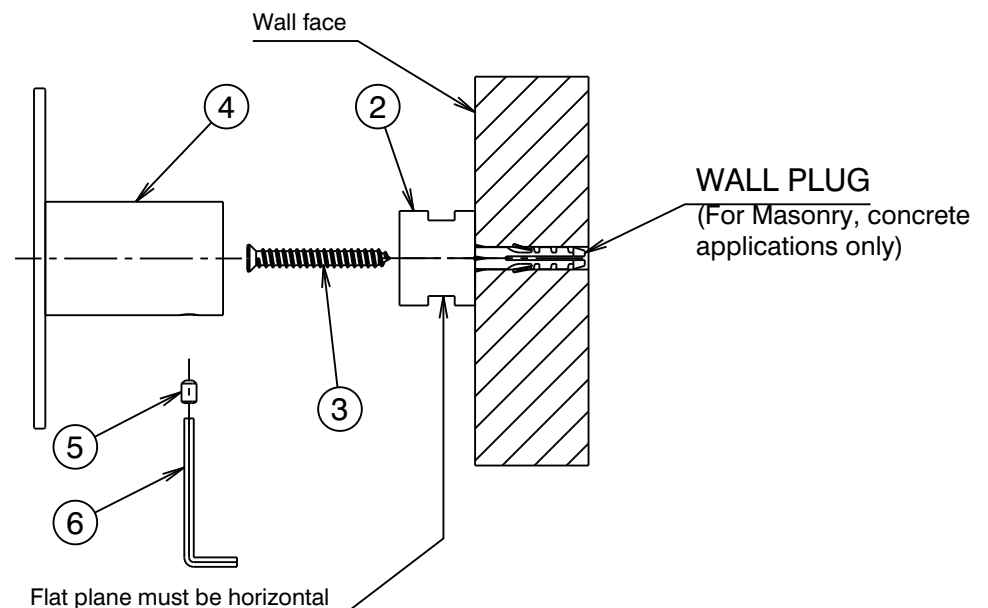


Fig. 2