

Plug and Waste Installations Procedure

1. Disassemble product as shown in **Fig.1**.
2. Tighten and secure fixing nut "A".
3. Fit plug and waste assembly, with flexible sealant applied as shown, into basin waste hole.
4. Fit rubber washer and waste nut on to plug and waste assembly, and secure with fixing nut "B" as detailed in **Fig.2**.

Waste Assembly with Grate - Standard

Code No. 687140C

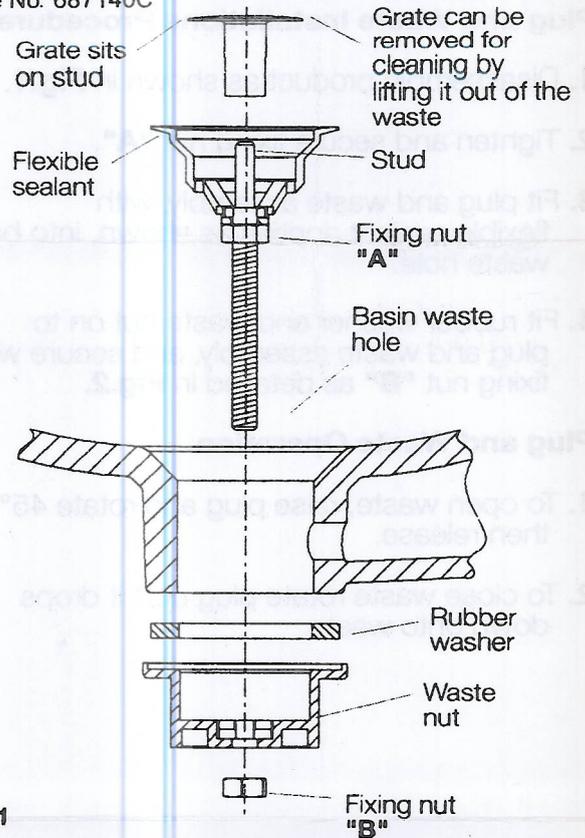


Fig. 1

Waste Assembly with Grate - Anti-Vandal

Code No. 687141C

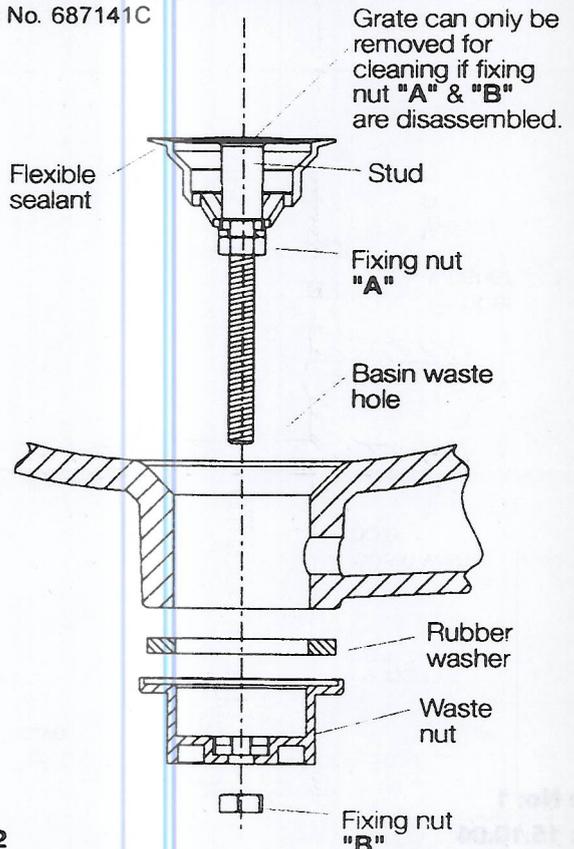


Fig. 2