

# caroma<sup>®</sup> cube

## SHELF WALL BASIN

### PLUMBERS INSTALLATION INSTRUCTIONS

### PLEASE READ CAREFULLY BEFORE INSTALLATION

#### CUBE SHELF Wall Basin Installation

##### Procedure D.200 Fixing Kit.

##### IMPORTANT

Provide suitable reinforcement behind finished wall for the basin D.200 Fixing at the fixing height position.

##### Roughing in for D.200 Fixing Kit:


For timber stud walls, nogginns and studs must be positioned at a height to allow for the location of fasteners as detailed in **Fig. 1**.

#### BASIN INSTALLATION WITH D.200 FIXING KIT

- 1- Mark fixing screw hole position on finished wall at the recommended height as detailed in **Fig. 1**.
- 2- Drill two Ø12mm holes in masonry wall for expansion fasteners. For timber stud walls drill two Ø8mm holes for Fixing Screws.
- 3- Insert expansion fasteners into the drilled holes in masonry wall. The Fixing Screws, should be screwed into the wall using the flat section of the Fixing Screw, with a spanner as shown in **Fig. 2**. Allow 53mm of thread to protrude from the finished wall.
- 4- Fit taps and waste assembly to the basin.
- 5- Locate basin onto the Fixing Screws on the wall. Insert plastic bushes, metal washers and fasten to wall with fixing nut. To complete assembly as detailed in **Fig. 3**.
- 6- The Plastic Bush allows for leveling adjustment if required by rotating the hexagonal head, the basin will be slightly raised or lowered as shown in **Fig. 3**.
- 7- Tighten fixing nuts and connect plumbing to complete the installation.


All measurements are subject to accepted manufacturing tolerances.  
To ensure accuracy please check actual product dimensions before drilling for installation.  
The manufacturer reserves the right to change specifications at any time without giving prior notification.  
This product should be installed by a qualified plumber. Local authority, Water Board, and Building Regulations may apply to the installation of this product, and you should consult the appropriate bodies on these requirements.

#### Fixing Positions D.200 Fixing Kit and Outlet Position.

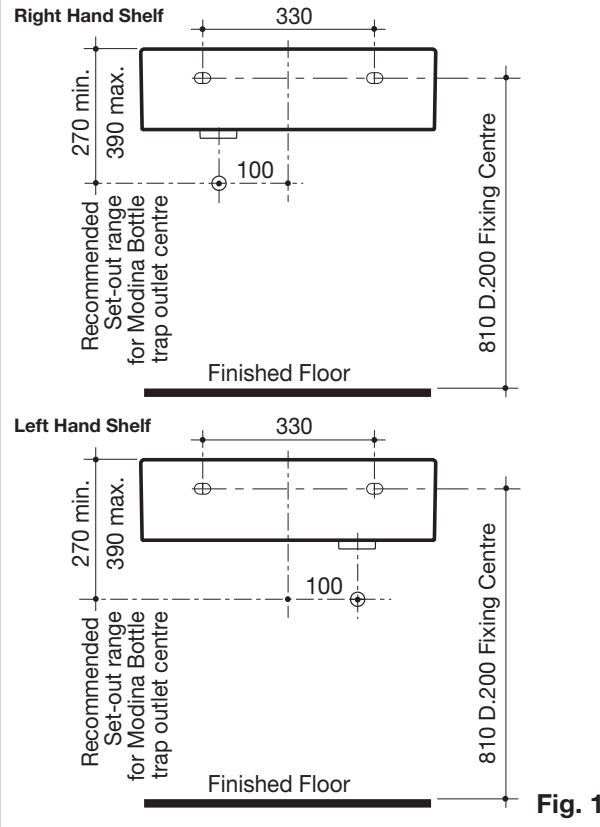


**Fig. 1**

#### Fixing Screw Masonry Walls Installation

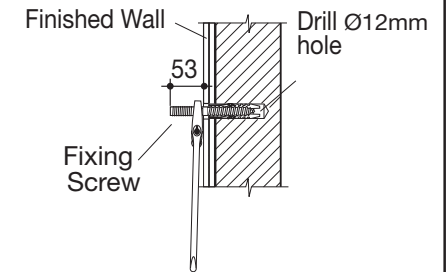


#### Fixing Screw Timber Stud Walls Installation

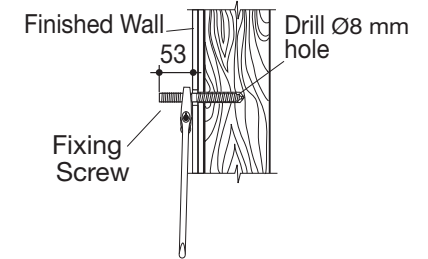

**Fig. 2**


#### D.200 Fixing Screw Kit Completed Installation

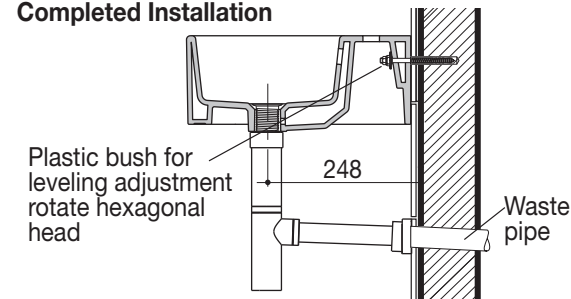

Recommended Modina Bottle trap  
Code No: 687290C

**Fig. 3**

#### D.200 Basin Fixing Screw Kit

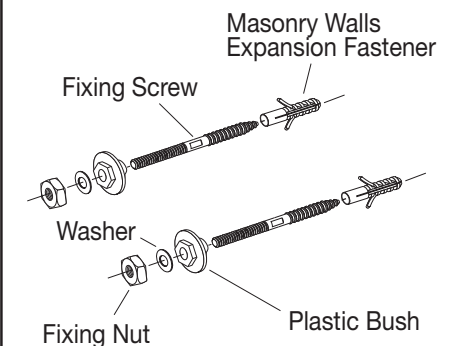

**Fig. 4**