
Installation Instructions

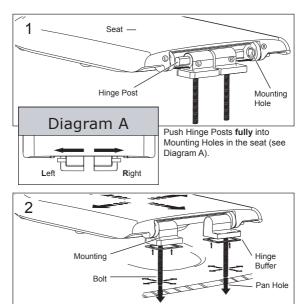

Ensure the Hinge Buffers are fitted to the underside of the Mountings. Lower seat onto pan, sliding bolts through pan holes, utilising the bolts X-Y adjustment to position the seat.



Check that the seat is correctly positioned on the pan. Slide Washer up to base of Pan and tighten Nut frimly using the Nut Tool.

Manufactured and Distributed for **GWAIL** ABN 15 055 964 380 GPO Box 1411, Brisbane 4001