

# INSTALLATION INSTRUCTIONS

## WINDSOR 410 COMPACT WALL BASIN

*JohnsonSuisse*  
Bathroom Solutions

PRODUCT  
CODE:  
J3190.1




### INSTALLATION STEPS

1. Fix the clip brackets to the wall at the desired height - the brackets should be level and 130mm apart.

NOTE: when installing onto a stud wall a reinforcing noggin is required, this should be fitted centred on the height of the mounting screw fixing.

2. Fit tapware and waste assembly to basin..
3. Slide the basin into the clip brackets. Check and adjust so that the basin is level and securely fixed.
4. Connect water supply and waste.

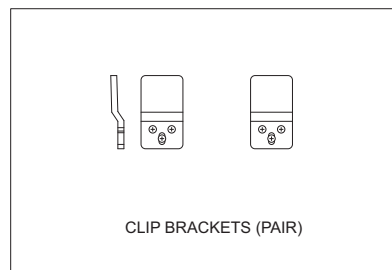

### DIMENSIONS

