


PEDESTAL TOILET PANS BASIC INSTALLATION INSTRUCTIONS

- THE WC PAN MUST BE SECURELY FIXED IN POSITION
- The pan can be installed by setting in a mortar bed or using screw fixing.
- For mortar bedding use a 4:1 sand and standard cement mix (do not use Rapid Hardening cement). If the floor is tiled, cut out the tiles beneath the pan to create a good bonding surface.
- When using fixing screws always use protective bushes. Do not over-tighten the screws.
- Silicone sealant may be applied to seal around the pan base.
- Ensure that the pan connector is correctly sealed to the pan outlet spigot
- Install the cistern to suppliers instructions
- The toilet suite complies with AS1172 Parts 1 & 2 and has a recommended working load bearing limit of 200kg.

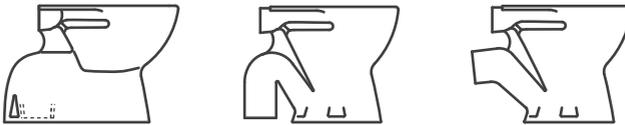

NOTE

installation must be carried out by a licenced plumber in compliance with the Plumbing Code of Australia and any associated reference Standards and Local Regulations that may be applicable.

For full warranty terms see: www.marbletrend.com.au

CLEANING

External vitreous china surfaces should be cleaned with a soft, damp cloth and mild detergent.

The interior of the flushing bowl should be regularly cleaned with a toilet brush and proprietary toilet cleanser.

Chemical/chlorine water sanitisers must not be used in the cistern tank.