

# INSTALLATION INSTRUCTIONS

## BOSTON BASIN SHROUD

*JohnsonSuisse*  
Bathroom Solutions


PRODUCT  
CODE:  
J3189




### INSTALLATION STEPS

- Mount the basin on the wall at the desired height according to instructions.
- Fit and connect waste and water supply connections.


**1** Place shroud in position under basin ensuring the top edges fit into the basin recess.  
Mark drill position

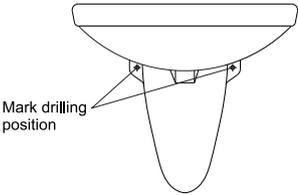


**2** Drill hole with 8Ømm drill bit.

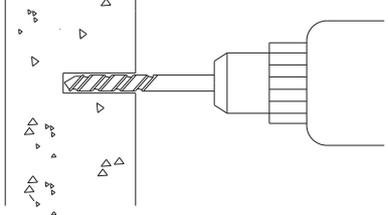


**3** Place shroud in position, insert wall plugs through installation holes on pedestal. Screw in stud screws.

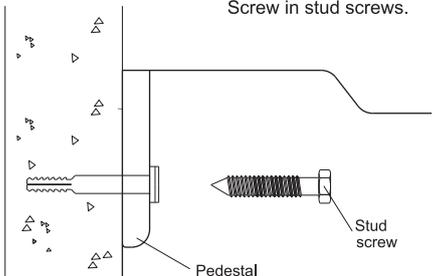


### BOSTON BASIN SHROUD DIMENSIONS

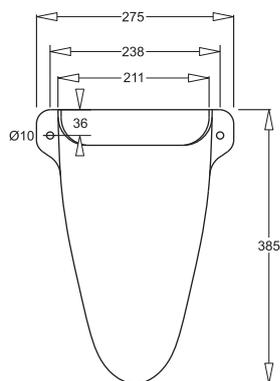

FRONT

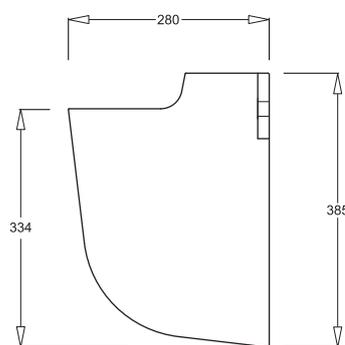

SIDE

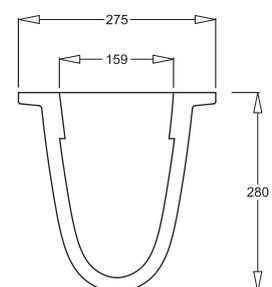

PLAN