Cleaning Your Shower

- Never use abrasives to clean this product.
- Clean regularly with contamination free warm soapy water or damp soft cloth.

Rere Rail Shower and Soap Dish (where provided)

Installation Guide

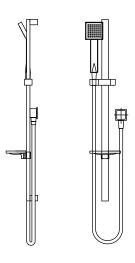


Illustration may not reflect actual product shape.

IMPORTANT

Please read all of the instructions before installation

NOV 2010 97-9288



METHVEN

Important Installation Considerations

Please read all of the instructions before installation

- NOTE: Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L p/min may not allow the following to function correctly:
 - some instantaneous water heaters
 - · some tempering valves
 - · some thermostatic mixing valves
- Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
- When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with AS/NZS 3500 1.12 recommendation; otherwise hose guarantee will be voided
- 4. Use of this product in non-domestic applications voids warranty
- 5. Damage caused by hydrostatic testing is not covered by our warranty.
- 6 Ensure hose is installed correctly (see Fig.1). Outer hose will pinch the inner tube and lead to failure. Such damage is easily recognised and not covered by warranty. Install correctly with a wall elbow (included).




For commercial, industrial or parahealth use; ask your store consultant for correct shower selection.

Shower Installation Instructions

THE TOOLS THAT YOU MAY NEED: SCREWDRIVER, ADJUSTABLE SPANNER AND DRILL.



- 1 Establish the desired rail position and height.
- 2 Mark the top and bottom fixing hole positions on the wall at 650mm centres.NOTE: For best results, check drill holes on the card with the rail and pillars provided.
- 3 Drill both holes to suit wall plugs provided.



- 5 Check the handset slider/holder and soap dish (where provided) are on the rail.
- 6 Slide the two pillars over the 'L' brackets. NOTE: The outside of pillars should be flush with rail ends.
- 7 Remove grey buttons from each end of the rail.
- 8 Fit rail to pillars through slots in rail.
- 9 Use short screws provided to tighten rail to pillars and replace grey buttons.

13 Connect the hose and handset using the washers supplied. Hand-tighten only.

- 10 Move the soap dish to the required position on the rail.
- 11 Clean the exposed thread and bind clockwise with thread sealing tape.
- 12 Fit the elbow to the thread. Tighten only by hand.

 (Ensure that the elbow is vertical so that the hose hangs straight down).











THE METHVEN GUARANTEE