
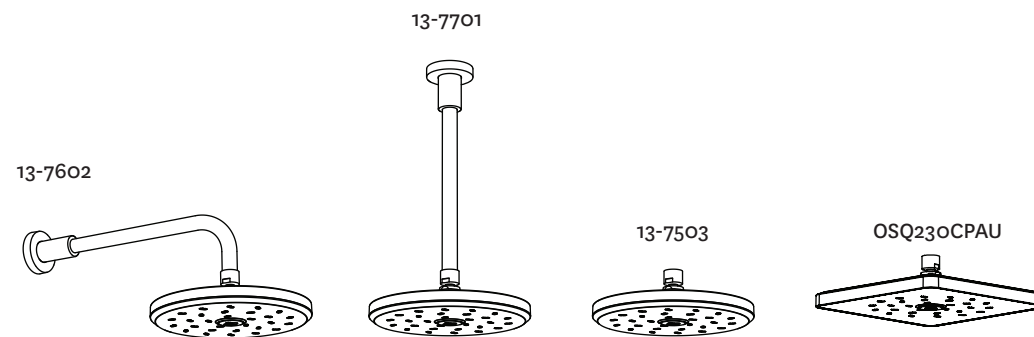
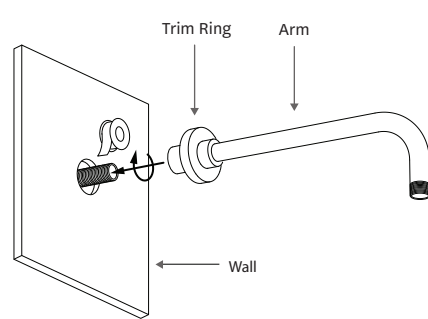
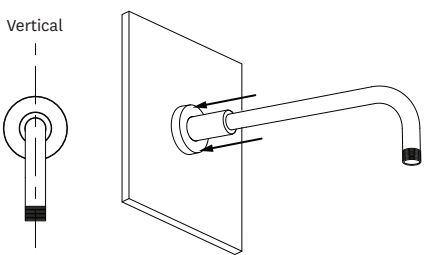
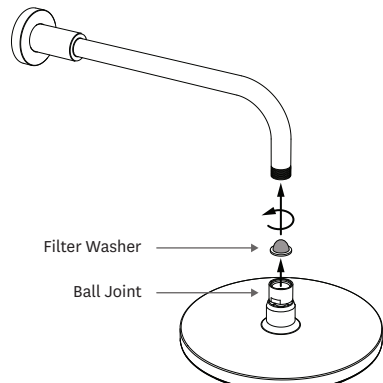


SATINJET WALL/CEILING DRENCHER INSTALLATION GUIDE

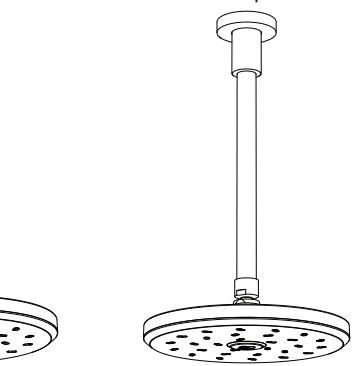

NOTE - If assembling a showerhead to a pre-existing arm skip to step 3

<p>1. FOR WALL ARM - RECOMMENDED MINIMUM HEIGHT 2100mm FROM FLOOR LEVEL</p>  <p>Slide chrome trim ring onto the appropriate end of the arm. Screw the arm onto the 1/2" connection using plumbers tape or similar to ensure a reliable seal.</p>	<p>2.</p>  <p>Position the arm vertically and push trim ring into place.</p>	<p>3.</p>  <p>Remove the protective cap from the showerhead ball joint and screw the unit onto the wall/ceiling arm ensuring the filter washer is in place.</p>
<p>4.</p>  <p>Tilt and rotate the shower head to the desired position.</p>	<p>CLEANING</p> <p>Water may contain lime which remains on the surface after the water has evaporated. These lime deposits can be prevented from forming by wiping immediately after use.</p> <p>To clean the chrome-plated surfaces use a soft cloth, soap and warm water. Never use cleaning agents that contain a corrosive acid or a scouring additive.</p> 