


Self-Cleaning Overhead shower

Revolution
SHOWERS

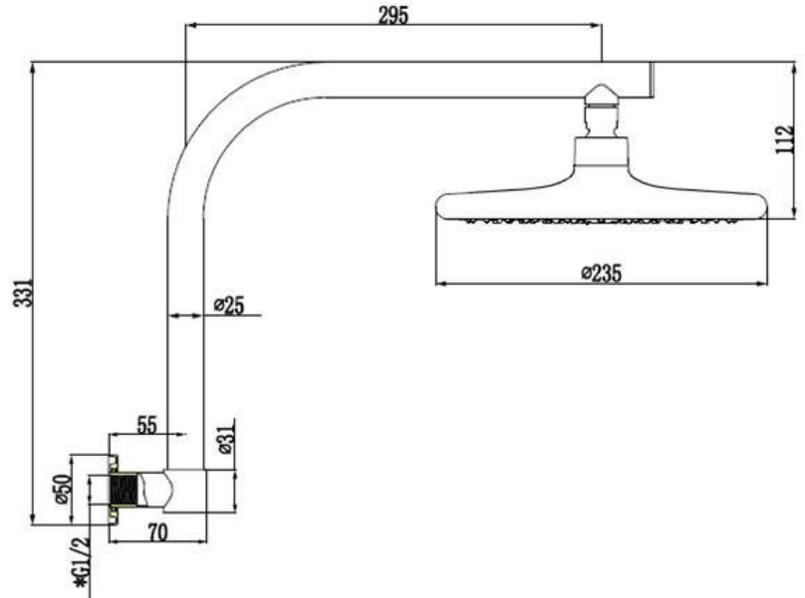



Installation Guide: SCS5



1. Apply teflon tape



2. Push on cover plate and screw on wall arm

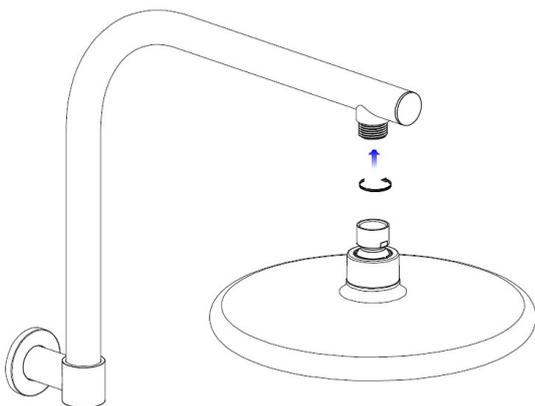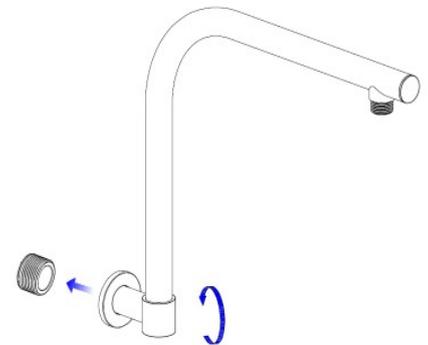

3. Screw on the
shower head