


# Self-Cleaning Hand shower



*Revolution*  
SHOWERS

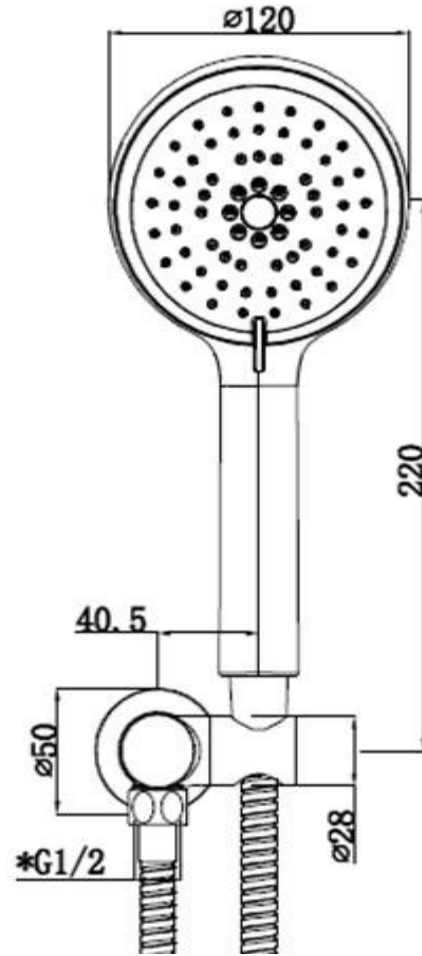


## Installation Guide: SCS2




1. Apply teflon tape

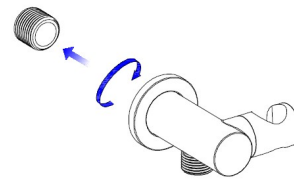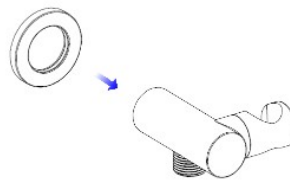

2. Push on cover plate and screw on wall bracket

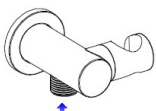

3. Screw on the  
hose

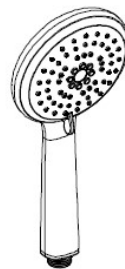

4. Screw on the hand shower

