

GENERAL INSTRUCTIONS FOR FITTING TOP-FIXED TOILET SEATS

These instructions are for toilet seats that are fitted using the top-fix system where the seat fitting is done externally (i.e. there is no access to internal part of the mounting bolt). Seats may be soft or non-soft close type.


Most seats have a quick-release function so that they can be easily detached for cleaning by depressing one or two release buttons.

Before installation check that the seat and the hinge bolts are a suitable fit on the toilet bowl.


Please read these instructions carefully to ensure trouble-free fitting of the seat and retain for future reference.

A Phillips Head screwdriver is the only installation tool required


COMPONENTS

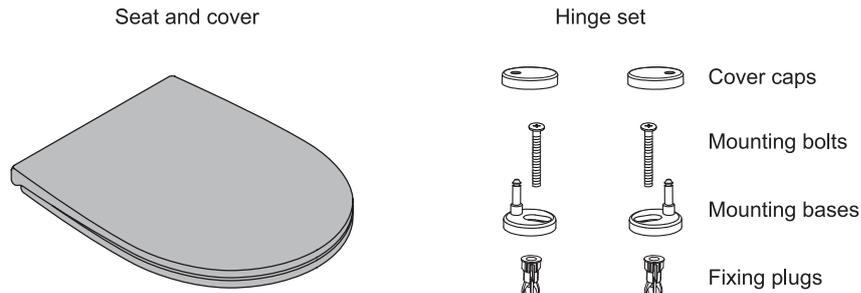


INSTALLATION STEPS

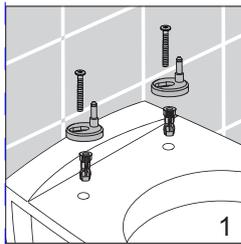


Insert the fixing plugs and fit the mounting bases

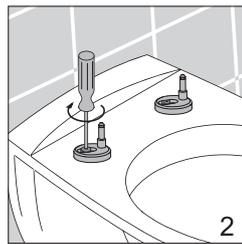


Tighten the screws

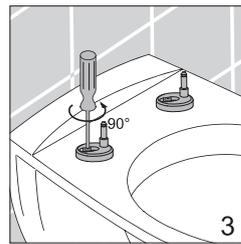


Loosen the screws by turning 90° anti-clockwise

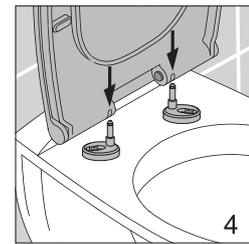


Align the pins and clip on the seat assembly

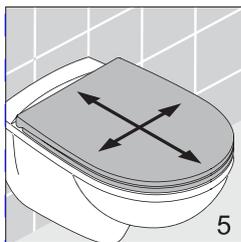


Align the seat with the WC bowl

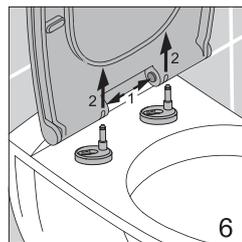


Press push-buttons and remove the seat and cover

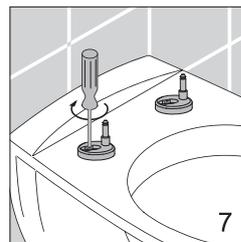

Tighten the screws

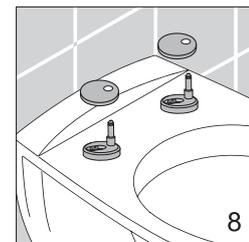

Fit the cover caps onto the hinge fixtures

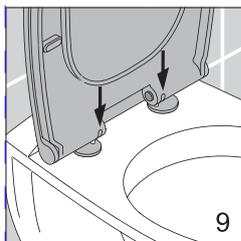

Clip on the toilet seat and cover

CLEANING AND CARE

- Regularly wipe the seat using a soft damp cloth and mild detergent
- For convenience the seat may be removed by depressing the release button(s) and lifting the seat up
- With the seat removed, the area around the hinge mounts can be easily cleaned.
- Do not clean the seat or cover with strong chemical cleaners, scouring abrasives or stiff brushes as these may ruin the polished surface.
- Avoid spilling cosmetics and solvents as this can permanently stain the surface finish
- Do not place heavy objects on the cover and avoid dropping items onto the seat.
- To maintain the life span of the soft-close function do not forcibly close the seat or cover
- Periodically check the tightness of the hinge fixing screws.