

INSTALLATION INSTRUCTIONS

LIFE ASSIST Wall Faced P Trap Pan

Code J2775

JohnsonSuisse



AS1428.1

DESCRIPTION

The **LIFE ASSIST Wall Faced** toilet is a fully concealed pan with a 180mm P trap set out. A S Trap set out of 90-300mm can be achieved by using an X011H adjustable pan connector (this is an included item).

The pan is designed to be used with an in-wall cistern and is fully compliant with AS1428.1 Design for Access and Mobility.

The recommended seat to comply with AS1428.1 is the Life Assist Single Flap seat (RB6044/DLDSW)


The recommended seat for ambulant-assisted living installations is the Life Soft Close seat (J2809/DLSCQR)

Floor fixing brackets are provided.

CISTERN

Install with the R&T Econoflush In-wall Pneumatic Activated cistern(J2982) to obtain compliance with AS1428.1.The R&T Econoflush In-wall Frameless cistern (J2981) may be used for other installations (ONLY IN AUSTRALIA).

Note that the flush pipe connection at the back of the pan must be located 405mm above the floor level(DIAG 1).

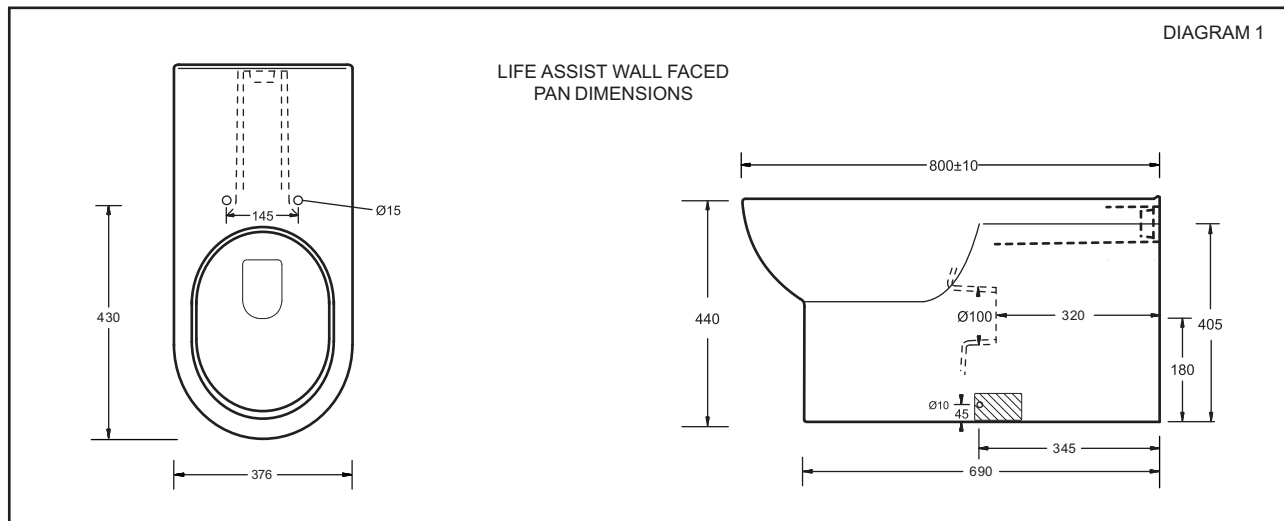

INSTALLATION STEPS

1. Inspect pan and seat for any damage before starting installation
2. Check site roughing in, water supply position and assembly dimensions.
3. Install in-wall cistern to supplier's instructions
4. The pan can be installed using the concealed floor-fixing brackets
5. Place the pan in position ensuring that it is aligned with the centerline of the sewer connection and mark the location of the pan base at the position of the side fixing screw holes(DIAG 1).
6. Remove the pan and locate the position of the floor brackets 25mm in from the external edge of the pan base then drill 10mm holes for the floor fixing brackets.
7. A pan connector (X011H) is supplied for S Trap installations(ONLY IN AUSTRALIA. The distance 90 to 300 - DIAG 2, may be different in NEW ZEALAND)

GENERAL

- Fill the cistern and check the water level
- Test flush several times and check for leaks
- Fit the seat

