Zen SS316L Shower Rail


Nero



Versions:202405

WATER RATING WWATER RATING WWWATER TRAINS WWWATER TRAINS WWW.WATER TRAINS WWW.WATER TRAINS COMPANY WWW.WATER TRAINS WWW.WATER

Drawing

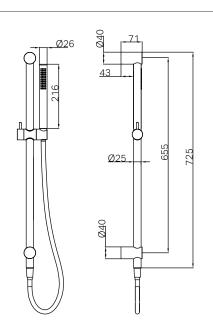

Specifications

Watermark License WM-060093 Temperature Rating

Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa

Finish & SKU



1x Shower Rail 1x 1.5m Hose


Packaging Includes

1x Hand Shower (Built-In Check Valve)

*Dimensions are nominal measurements only.

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

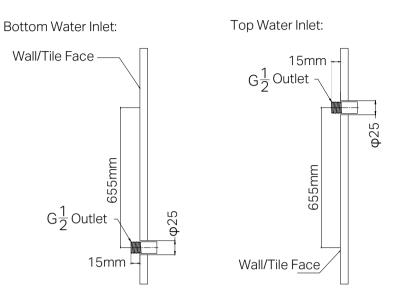


1. The water inlet connector can be installed on either the upper or lower mounting bracket, as shown in the figure above.

Use a level to mark the drill points to ensure the back plates are aligned horizontally.


Drill a 6mm holes at the marked points.

Check that G1/2 outlet thread is the correct length as shown. Cut to length if required ensuring end face is square.

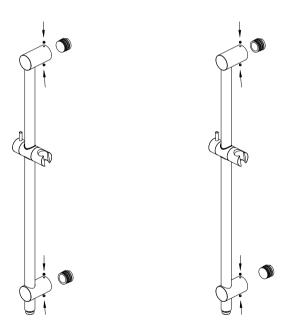

3. Slide both top and bottom back plate onto the rail assembly, as shown on the picture.


4. Push shower rail assembly onto the wall/tile surface.

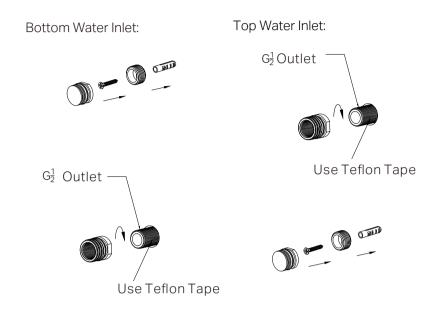

2. Wrap the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.

Screw the adapter onto the outlet.

Push wall plug into drilled hole. Fit mounting pillar in place with screw. Tighten firmly.

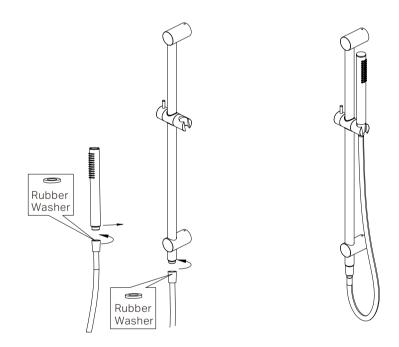

5. Connect hand shower with the hose and shower rail, ensuring rubber washers are present at both connections for leak prevention. Make sure each screw connection is strong.

Open the drainage system and water supply, check if there's any leakage in the connections.

Tighten grub screws firmly. Slide the back plates against the wall/tile face properly.

MAINTENANCE AND CARE:

- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

FINAL INSPECTION:

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.

www.nerotapware.com.au Zen SS316L Shower Rail-Manual

Nero

