


## Raised Disabled Care Pneumatic Flush Buttons Plate DDA Compliant

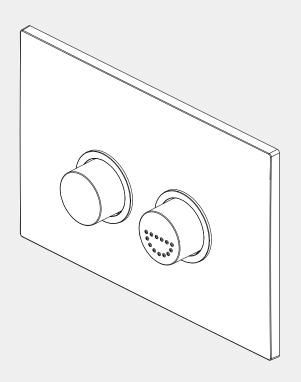

Nero

Versions:202401

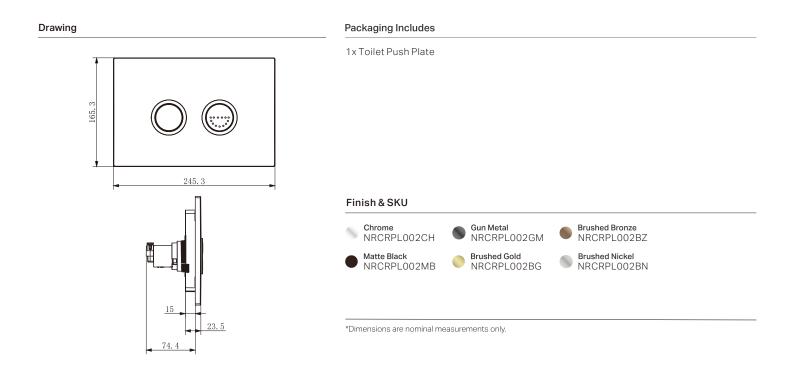

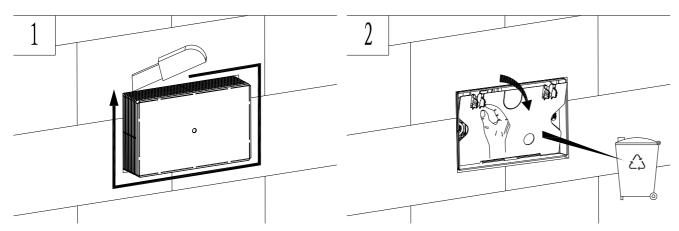


4

b


Turn on valve to flush out debris.

Turn valve on and check for leaks.


Ensure the wall opening is clean and of the right dimensions for Squeez clips to remove cistern plate. the flush button unit.

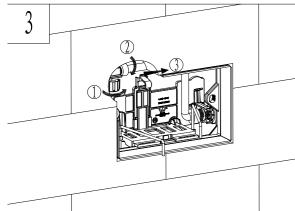


Remove hose follow by 1, 2, 3 direction.

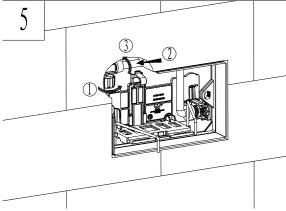


Reconnect hose follow by 1, 2, 3 direction.

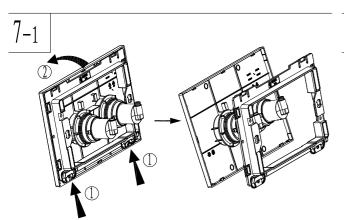


Connect the pneumatic tube to the actuator.

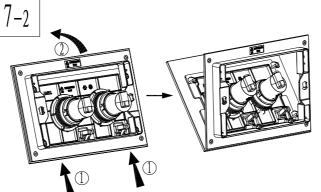

Ensure the tube and the mounting panel are secure and there are no kinks.

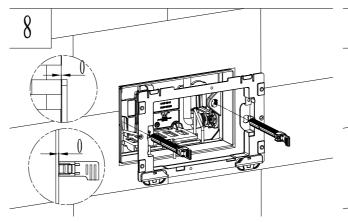


Hold mounting panel vertically and fit lock threads into the cistern plate holes.

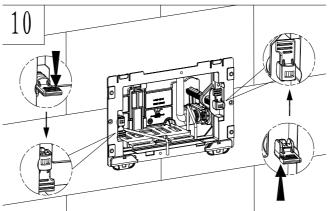

Fold the two tabs in.

13

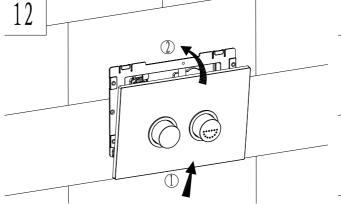


Align and attach the faceplate to the panel.


Finished.




Nero

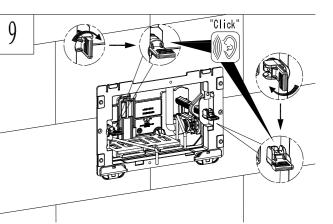

Lock in the mounting panel by twisting locking thread clockwise with a 'click' sound.

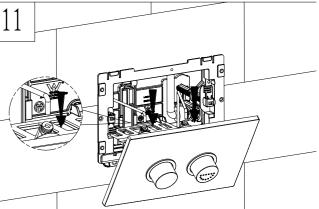

Fit rods into outlet flush valve by inserting through holes where arrows pointing at.

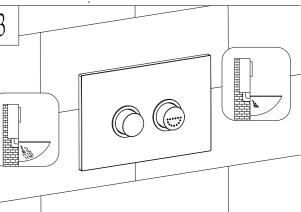

Nero

ώ

## Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

