

Care 300

Sanitary Compartment For People with Ambulant Disabilities

6/3 litre Toilet Suite



A pedestal type 6/3 litre dual flush **Care Pan** installation designed to provide a raised seat height of between 460-480mm for accessible applications . The versatility of the **Care Pan** makes it ideal for use by both the ambulant people with disabilities and wheel-chair users including wheeled commode chairs.

- Important:** Reference must be made to AS 1428.1-2009 with current amendments for people with ambulant disability requirements. The dimensions in this sheet may change with amendments to the standard.
- Pan:** Concorde Exposed Trap Care Pan 6 litre full flush washdown type.
- Traps:** S and P-trap unvented only. Slope of P-trap 95°
6 litre options: S-trap Code No.614400, P-trap Code No.614450
- Inlet:** 50mm back inlet.
- Cistern:** Sovereign 2000 3 Star Cistern (wall fix version).
Important: Working pressure minimum 30kPa to maximum 1000kPa flow pressure. Rain water tank compliant.
- Buttons:** Round Care Button - Metal (supplied). Other button options sold separately. See section 16.01 for further details
- Inlet Valve and Overflow:** Standard Bottom Entry Cistern – available as right hand inlet which is interchangeable and incorporates Quietflow inlet valve. Internal overflow only.
- Seats:** Caravelle Care seat supplied, available in Caroma White (W), Sorrento Blue (SB) and Anthracite Grey (AG). See Section 15 - SEATS for further details.
- Position of the Pan:** Refer to below illustration for specific setout dimensions for this suite to meet projection requirements for people with ambulant disabilities.
- Colours:** Pan and cistern available in white only.
- Installation:** The installation of the toilet suite shall be in accordance with the normal minimum drainline grade requirements in AS/NZS 3500.2.
- Dimensions:** All dimensions are in millimetres and are subject to normal manufacturing variations. Caroma pursues a policy of continuing improvement in design and performance of its products. The right is therefore reserved to vary specifications without notice.





Note: The projection requirements for people with ambulant disabilities is 610 to 660mm.


All height dimensions to underside of pan, make allowance for mortar bedding.

Mortar bedding: The pan should be fixed to the floor with a sand cement mixture of 3:1 to a depth of 60mm. When bedded the back of the foot of the pan should be approximately 10mm above the finished floor.

Screw fixing: The pan should be bedded with an acetic cured silicone sealant and fixed with corrosion resistant screws and pan guard washers. Use Caroma pan fixing kit. Code No.601150.

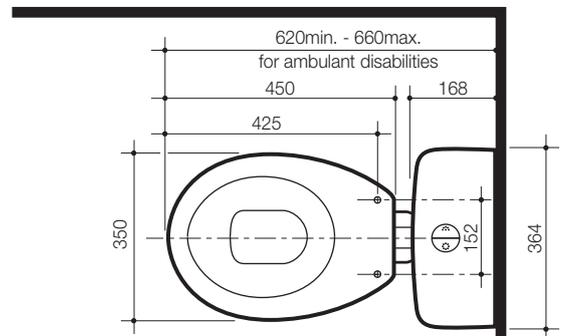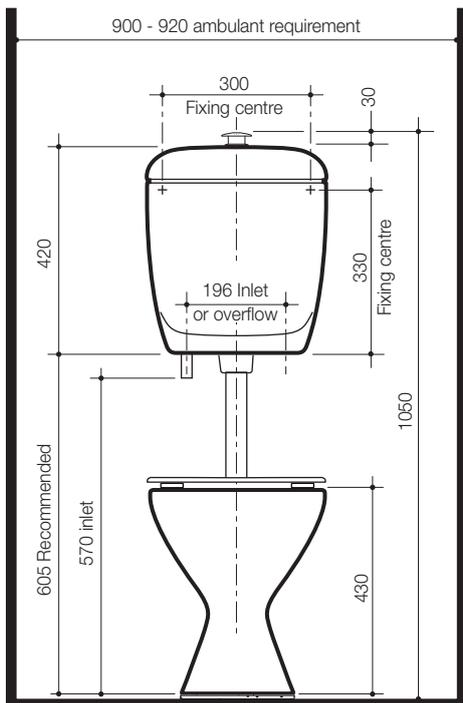

Care 300 Toilet Suites with Caravelle Care Seat	Code No.	Seat colour:
Single Flap	S trap 987904	W, SB or AG
	P trap 987902	W, SB or AG
Double Flap	S trap 987905	W, SB or AG
	P trap 987903	W, SB or AG

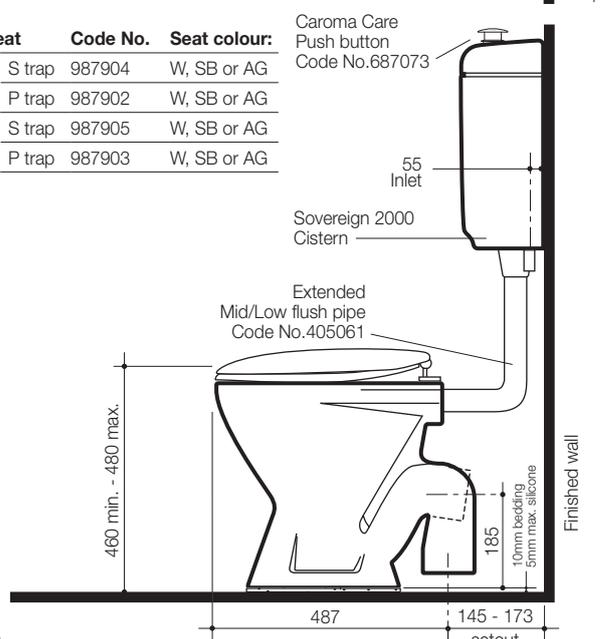

* Reference must be made to the AS 1428.1-2009 Amd 1 to confirm installation requirements.