

Concorde Care

4.5/3 litre Vitreous China Pan for People with Accessible Applications ♿



A pedestal type 4.5 litre full flush **Concorde Care** connector pan installation designed to provide a raised seat height of between 460 - 480mm for accessible applications ♿. The versatility of the Concorde Care connector pan makes it ideal for use by both ambulant people with accessible applications and wheel-chair users including wheeled commode chairs.

Important: Further reference must be made to **A.S.1428.1-2009 with current amendments to determine circulation space, grabrail and installation requirements. The dimensions in this sheet may change with amendments to the standard.**

Pan: **Concorde Care** connector pan 4.5 litre full flush wash down type.

Traps: S and P-trap unvented only. Slope of P-trap 95°. S-trap Code No.614401; P-trap Code No.614451.

Inlet: 50mm back inlet.

Cisterns: The **Concorde Care** connector pan is recommended for use with the **Sovereign** cistern (wall fix version) and Caroma Care Pushbutton option White – Code No.416020W or Chrome – Code No.687073C or **Cosmo Care Cistern**.

Buttons: See Section 4 - CARE BUTTONS for further details.

Seats: The following Caroma seats are recommended: **Pedigree II Care**, **Caravelle Care** and **Colani** disabled. See Section 3 - SEATS for further details.

Position of the Pan: For wheel chair access the installed pan must be a minimum of 800 ± 10mm from the front of the pan to the finished wall and provide a seat height of 460 to 480mm. The projection requirements for people with accessible applications is 610 to 660mm.

Position of the Cistern: The underside of the cistern must be 600mm minimum from the finished floor. The push button height must be no greater than 1100mm from the finished floor.

Colours: White only.

Installation: The installation of the toilet suite shall be in accordance with the normal minimum drainline grade requirements in AS/NZS 3500.2.



Dimensions: All dimensions are in millimetres and are subject to normal manufacturing variations. Caroma pursues a policy of continuing improvement in design and performance of its products. The right is therefore reserved to vary specifications without notice.

Note: The projection requirements detail on this illustration are for wheel chair access only. The projection requirements for people with accessible applications is 610 to 660mm.

All height dimensions to underside of pan, make allowance for mortar bedding.

Mortar bedding: The pan should be fixed to the floor with a sand cement mixture of 3:1 to a depth of 60mm. When bedded the back of the foot of the pan should be approximately 10mm above the finished floor.

Screw fixing: The pan should be bedded with an acetic cured silicone sealant and fixed with corrosion resistant screws and pan guard washers. Use Caroma pan fixing kit. Code No.601150.

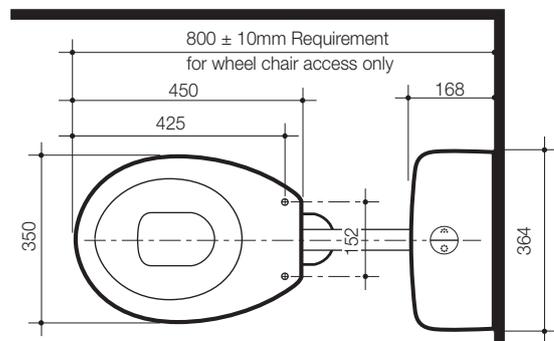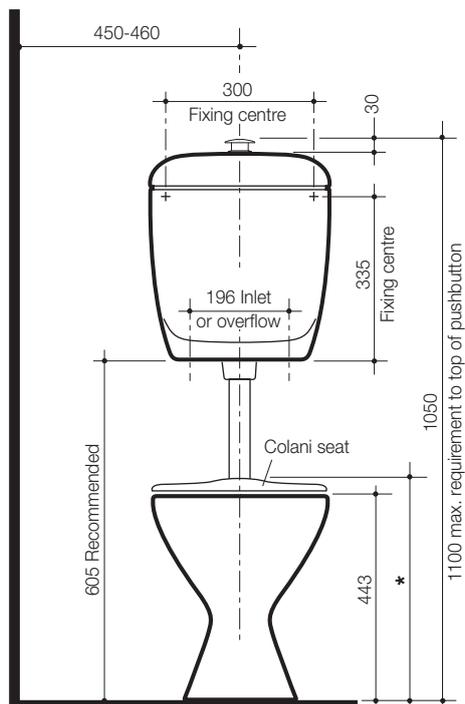

* **Pedigree II Care** seat height 470
Code No.320030

* **Caravelle Care** seat height 474
– double flap Code No.322020
– single flap Code No.322012

* **Colani** seat height 490
– double flap with Leda hinges Code No.813100
– single flap with Institutional hinges (recommended)
Code No.813000

Note: The lid on a double flap toilet seat is not suitable to be used as a support for users.

