

WATER EFFICIENT TAPWARE (NOMINAL FLOW RATE = 8 L/min)

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Shower outlet is fitted with a 9 L/min flow regulator.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- * Turn off hot and cold water supplies before installation.

Installation (Fig. 1)

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the inlet socket (3) onto the threaded nipple (2) and position shower as required. **DO NOT OVERTIGHTEN.**
- 3) Ensure strainer washer (5) is fitted to the inlet socket of the showerhead (6). Screw the inlet socket of the showerhead (6) onto the outlet thread of the shower arm (4). Tighten using a suitable spanner, taking care not to damage the decorative finish.

Note-

When adjusting inclination of the shower it is recommended that the hot and cold taps are turned off. Unscrew cross nut (7) one turn, position shower as required then tighten cross nut.

IMPORTANT
<u>Pressure & Temperature Requirements.</u>
<ul style="list-style-type: none"> • Hot and cold water inlet pressures should be equal. • Static inlet pressure range : 150 - 1000 kPa New Regulation :- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1- 2003, Clause 3.3.4) • Maximum hot water temperature : 80°C.

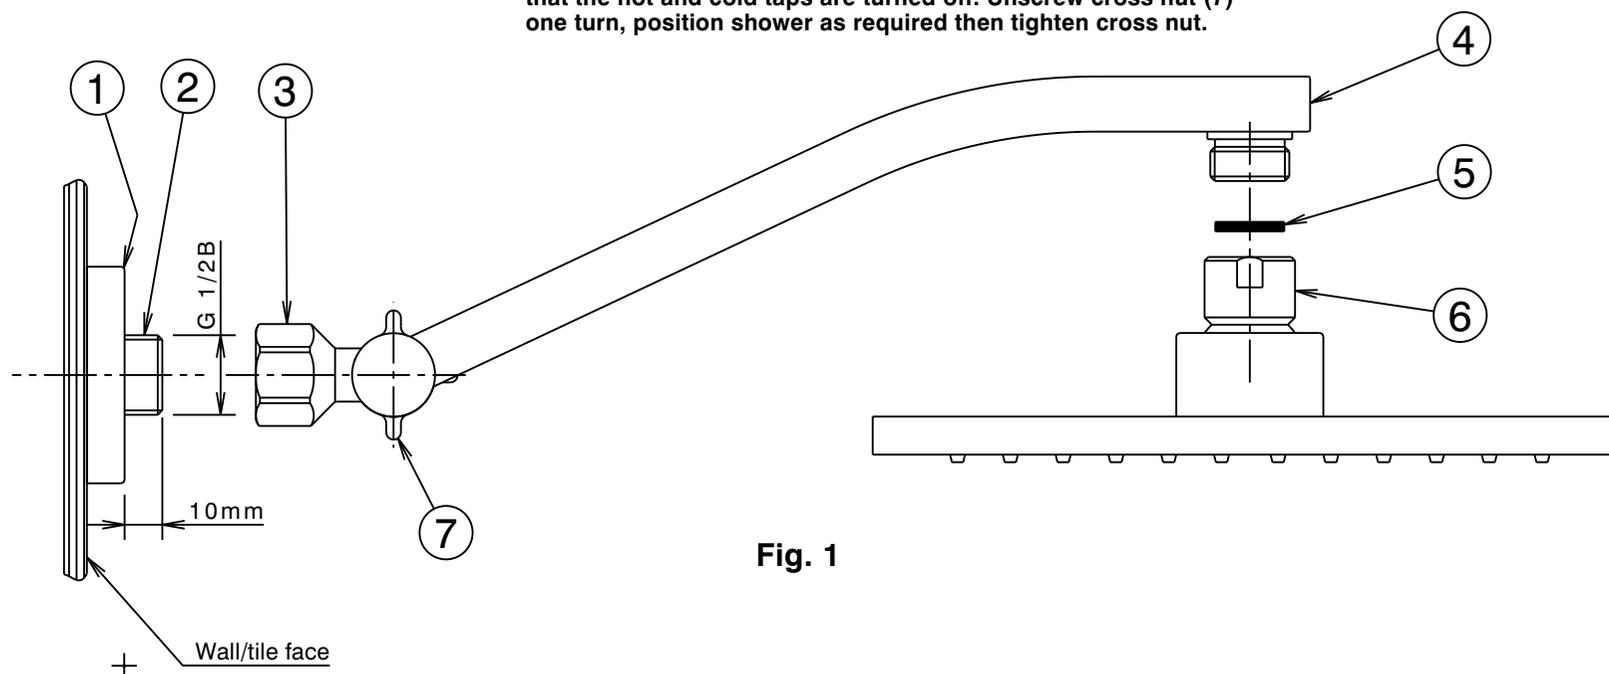


Fig. 1