



# FLICKMIXER – BASIN MIXER

WATER EFFICIENT TAPWARE  
(NOMINAL FLOW RATE = 5 L/min)

## PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

- \* Not suitable for gravity feed systems.
- \* Mixer is fitted with a 5 L/min flow regulated aerator insert. This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products.
- \* Isolating stop taps are recommended to be fitted to the inlet connections. (Part No. 842018C – Mini cistern 1/4T).
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water. Note: Aerator insert housing must be retightened to prevent removal by hand.

### Installation

- 1) From fixing pack fit 'O'ring (9) into groove in underside of mixer base (8). Screw stud (10) into underside of mixer (8).
- 2) Apply suitable lubricant to 'O'rings (11). Pass flexible tail (15) (with red indication) up through deck hole and install into hole marked 'H' in underside of mixer body (8). Pass remaining flexible tail (with blue indication) up through deck hole and install into hole marked 'C'. Tighten both tails (15) firmly by hand.
- 3) Place mixer over deck hole, ensuring hot water tail (15) is to the left and stud (10) is to the back. Fit gasket (12) & fixing plate (13) over stud (10) and screw on fixing nut (14). Position mixer as required before tightening fixing nut (14).
- 4) Connect the flexible tails (15) to the hot and cold isolating stop taps, taking care that flexible tails are not kinked, twisted or in tension as they are tightened.

### Replacing Aerator Insert

- 1) Carefully remove aerator housing (16) from mixer body (8), taking care not to damage the decorative finish. **Hint:** Wearing a dry rubber glove will assist when removing and tightening the housing.
- 2) Remove 'O'ring (18) & aerator insert (17) from aerator housing. Check that aerator housing is clean. Deposits of lime can be removed by washing in a vinegar solution.
- 3) Fit new aerator insert (17) into aerator housing (16) followed by 'O'ring (18) then screw assembly into mixer body (8) and tighten securely (to prevent removal by hand).

### Replacing Cartridge

- 1) Turn off hot and cold water supplies at isolating stop taps.
- 2) Remove indicator plug (4). Using 2.5mm allen key (3) loosen screw (2) and remove handle (1). Remove cap (5) taking care not to damage the decorative finish. Unscrew nut (6) then lift out old cartridge (7).
- 3) Ensure inside face of mixer body (8) is clean. Check that 'O'rings are in position in base of new cartridge (7). Fit new cartridge (7) into mixer body, taking care that two lugs on base of cartridge (7) fit into mating holes in mixer body (8).
- 4) Screw on nut (6). **Important:** –Nut (6) should be tightened to a torque of 10 Nm.
- 5) Replace cap (5), tightening by hand. Fit handle (1) taking care that it is pushed fully down, tighten screw (2) and replace indicator plug (4), position with red to the left.
- 6) Turn on isolating stop taps and check operation.


### **IMPORTANT**

#### **Pressure & Temperature Requirements.**

- Hot and cold water inlet pressures should be equal.
- Inlet pressure range : 150 – 1000 kPa  
New Regulation: – 500 kPa maximum operating pressure at any outlet within a building. (Ref. AS/NZS 3500.1 – 2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.

#### **Deck Requirements**

- Deck thickness : 45mm maximum
- Tap body hole (in deck) :  $\varnothing 34 - 36\text{mm}$

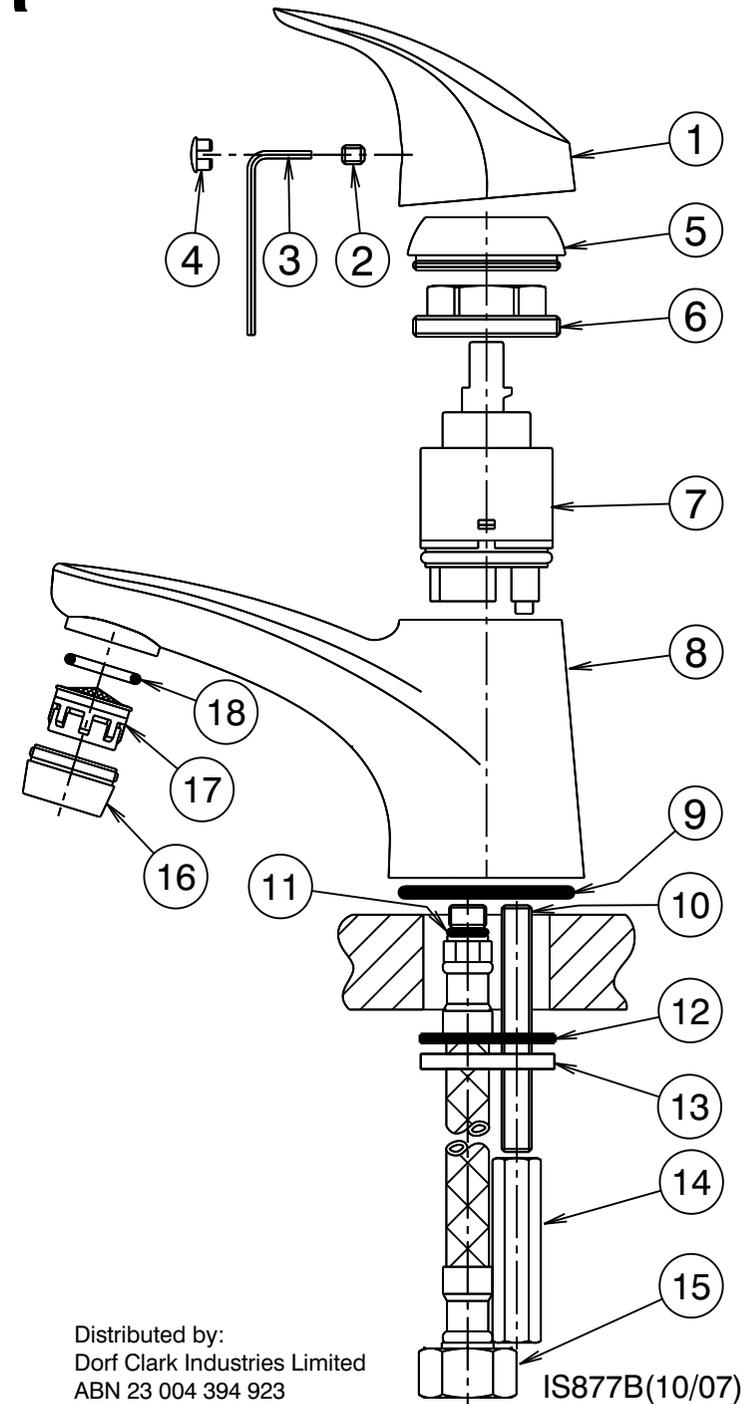

Distributed by:  
Dorf Clark Industries Limited  
ABN 23 004 394 923

IS877B(10/07)